

ROYAL ENFIELD

Genuine Motorcycle Accessory Instructions

HANDGUARDS

Part Number: - KXA00686

Models: FF.C6

WARNING

Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorized Royal Enfield dealer.

WARNING

Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.

WARNING

All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident.

WARNING

Ensure the electric vehicle is completely powered off and the main power switch is disabled before starting the accessory kit installation.


CAUTION

Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE

- The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts Supplied: KXA00686

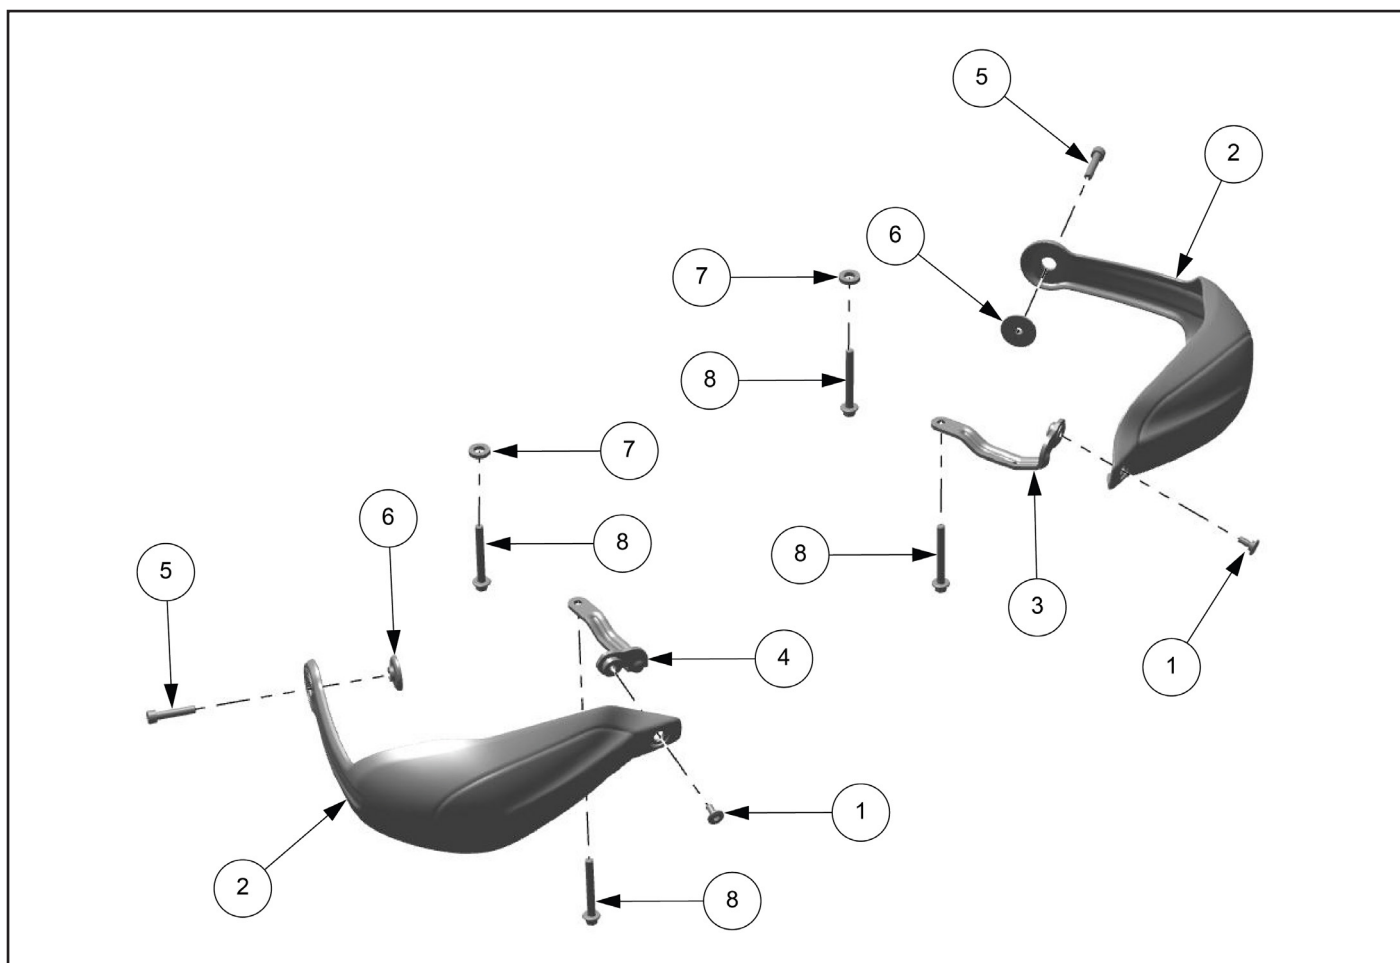


Item	Description	Qty
1	Fixing, M5 x 10mm	2
2	Hand guard shroud	2
3	Left hand bracket	1
4	Right hand bracket	1
5	Fixing, M6 x 30mm	2
6	Bar end spacer	2
7	Washer, M8	2
8	Fixing, M6 x 50mm	4

Installation Instructions


1. Assemble the hand guard shrouds (1) to the brackets (2) by fixing M5 x 10mm (3). Left hand assembly shown.

Do not fully tighten the fixing at this stage.

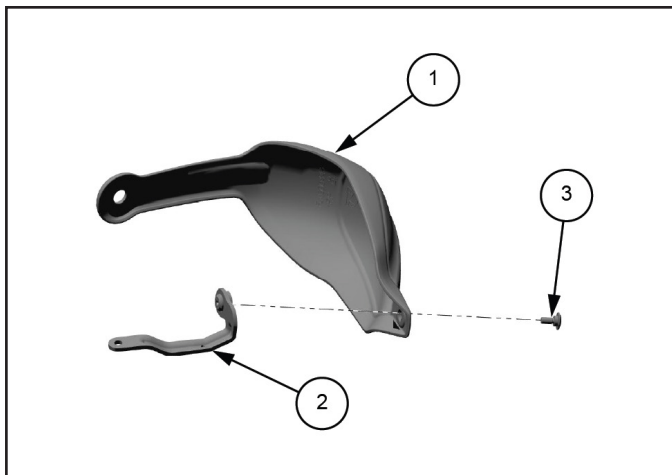

4mm hexagonal bit and ratchet

2. Remove the fixing (1) and bar end weight (2) from the left hand side of the handlebar and retain for reuse if the motorcycle is to be returned to its original condition.

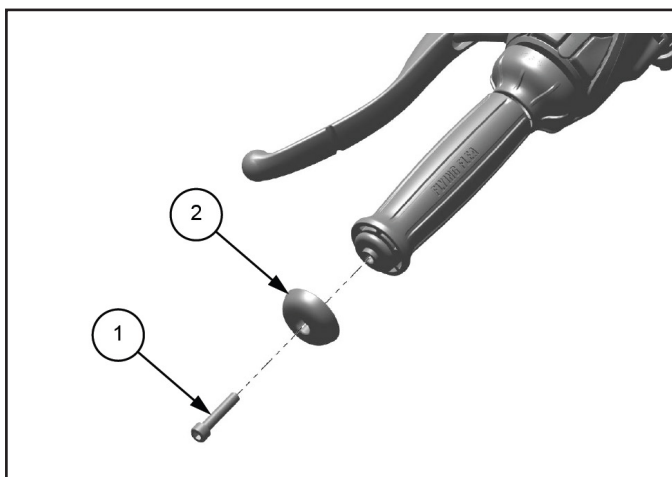


5 mm hexagonal bit and ratchet

3. Remove the two fixings (1) from the indicator mounting bracket and retain for reuse if the motorcycle is to be returned to its original condition.

 **CAUTION**

Securely hold the master cylinder and indicator mounting bracket whilst removing the fixings to prevent the components from falling or sustaining damage.

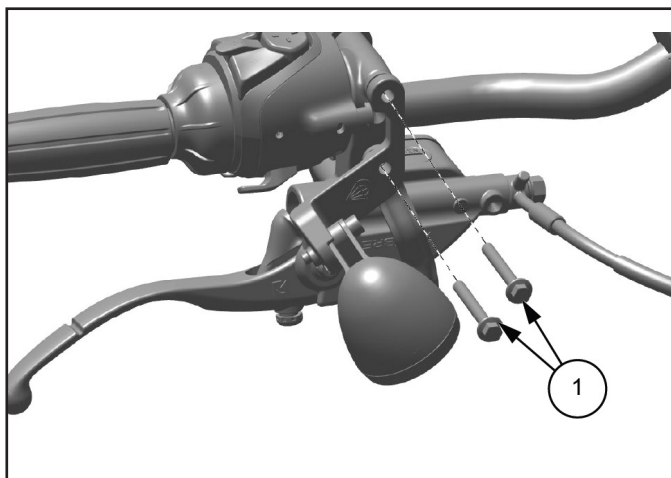


8 mm socket and ratchet

4. Assemble the left hand guard (1) to the indicator mounting bracket and assemble using two M6 x 50mm fixings (2) from the kit along with a washer (3) placed between the bracket and indicator bracket.

Do not fully tighten the fixing at this stage.


 **CAUTION**

Securely hold the master cylinder and indicator mounting bracket whilst assembling the fixings to prevent the components from falling or sustaining damage.

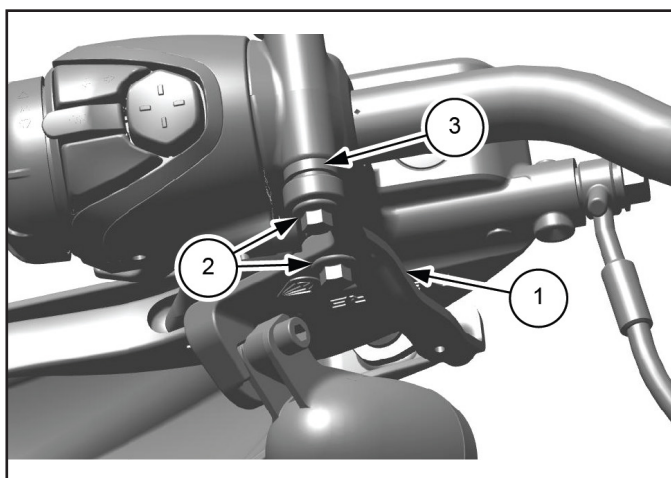

8mm socket and ratchet

5. Locate the spacer (1) between hand guard (2) and handlebar.
Assemble the bar end weight (3) removed in step 2.
Assemble components with an M6 x 30mm fixing (4) from the kit.

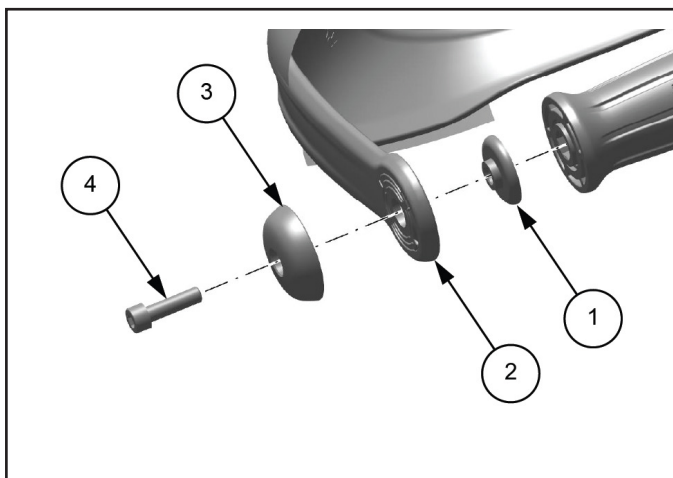

5mm hexagonal bit and ratchet

6. Tighten the bracket to the shroud fixing (1) to **5 Nm**.



4mm hexagonal bit and torque wrench

Tighten the bar end fixing (2) to **10 Nm**.




5mm hexagonal bit and torque wrench

Tighten the indicator mounting bracket fixings (3) to **9 Nm**.



8mm socket and torque wrench

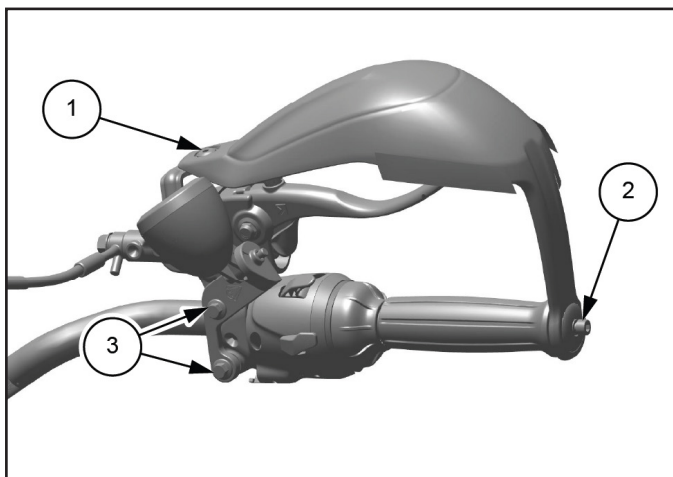

7. Repeat the above procedure for the right hand guard shroud installation from step 1 to 6.

⚠ WARNING

After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.