





Part Number:
1990267


Models:
Scram 440

- 

WARNING: Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
- 


WARNING: Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
- 

WARNING: All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident
- 

CAUTION: Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.
- 

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts Supplied: 1990267

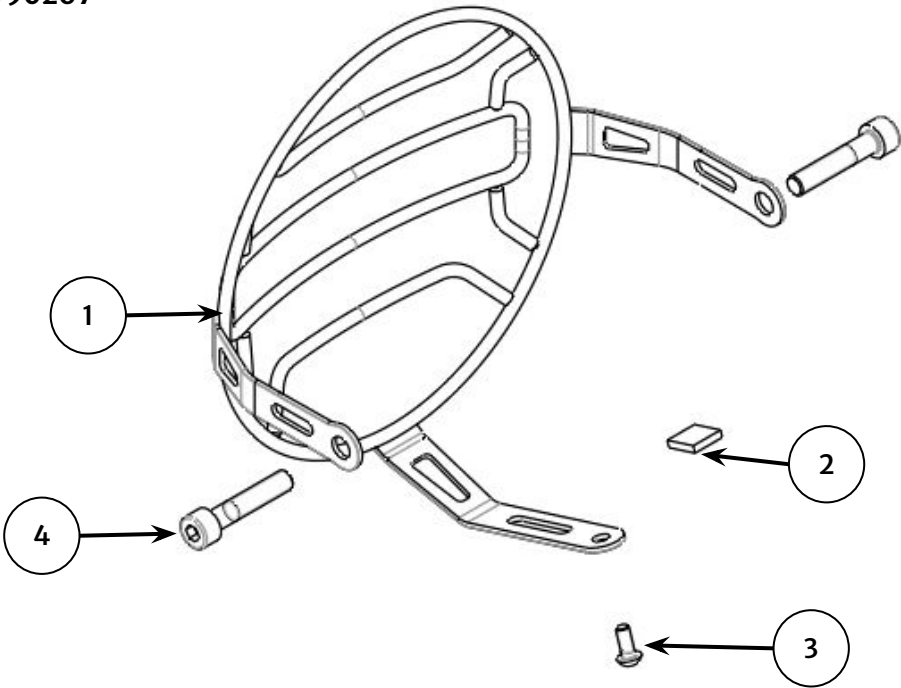


Item	Description	Qty
1	Headlight grill	1
2	Foam pad, self adhesive	1
3	Fixing M5 x 12mm	1
4	Fixing M8 x 40mm	2

1 Remove the fixing (1) from the bottom of the headlight assembly. Retain the fixing for reuse if the motorcycle is to be returned to its original condition.




4mm hexagonal bit and ratchet.

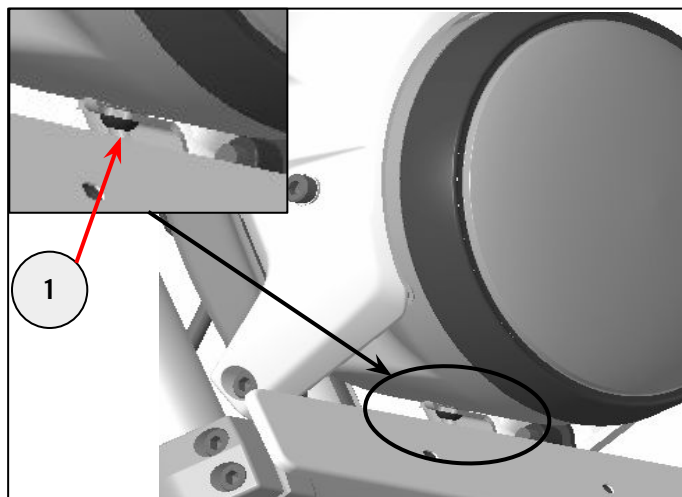

2 Remove two fixings (2) on both sides of the headlight assembly whilst carefully supporting the headlight assembly at the bottom. Retain the fixing for reuse if the motorcycle is to be returned to its original condition.




5mm hexagonal bit and ratchet.

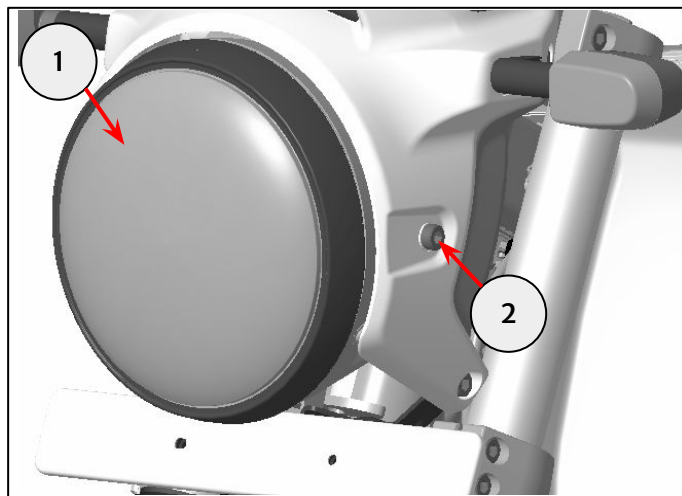

3 Affix the foam pad on the headlight grill lower mount approximately 45mm distance from shown edge as shown.


Press down firmly for 1 minute.

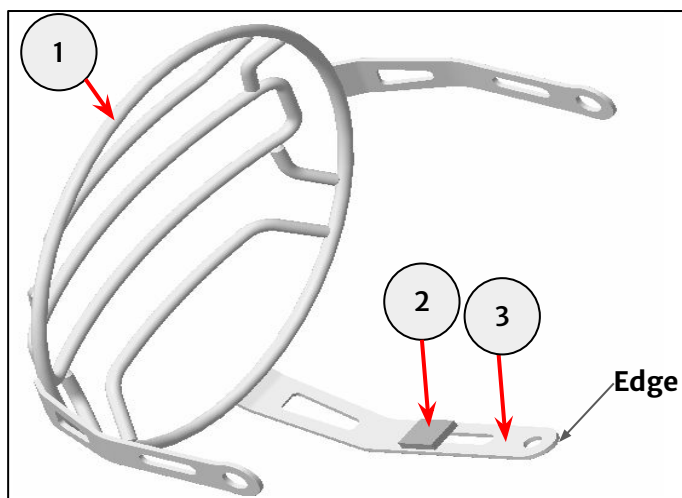


4 Position the headlight grill to the cockpit area as shown. Assemble an M8 x 40mm fixing from the kit through the side mounts, and an M5 x 12mm (3) through the lower mount. Align and engage all fixings before fully tighten.



3mm hexagonal bit,
6mm hexagonal bit and torque wrench.

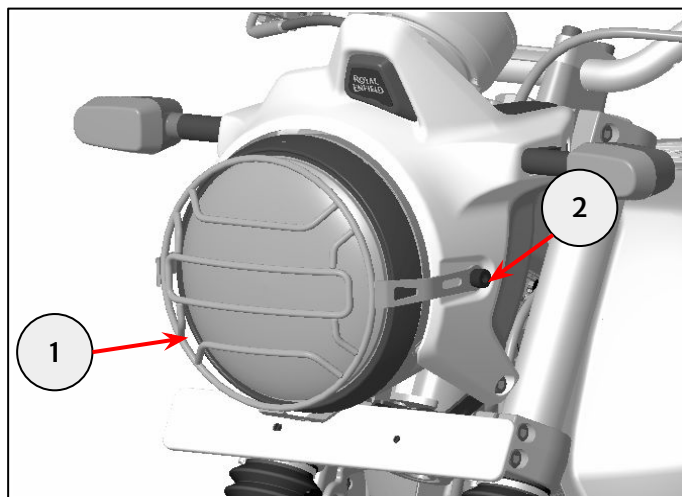

5 Tighten the lower mount fixing to 5Nm first before tightening the side mount fixings to 18Nm.

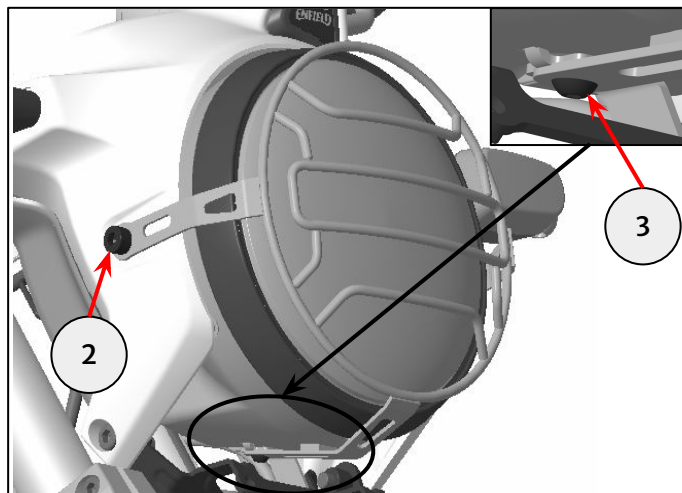

WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.