

Part Number:
1990401, KXA00281, KXA00461
& KXA00125

Models: BSVI Meteor 350, Classic 350, Bullet 350,
HNTR 350 and Goan Classic 350


- WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
- WARNING:** Before starting any accessory kit installation, ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
- WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident.
- CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts supplied: 1990401


Item	Description	Qty
1	Bar end mirror, right hand	1
2	Bar end mirror, left hand	1

Parts supplied: KXA00281

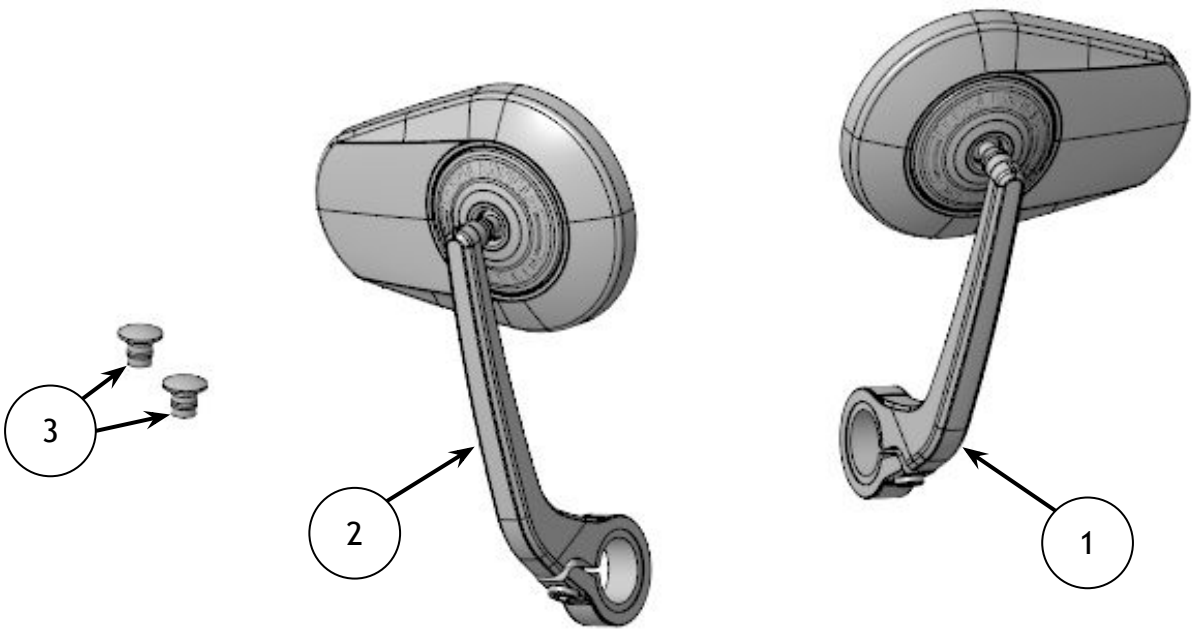


Item	Description	Qty
1	Teardrop bar end mirror, left hand	1
2	Teardrop bar end mirror, right hand	1
3	Mirror thread guard	2

Parts supplied: KXA00461

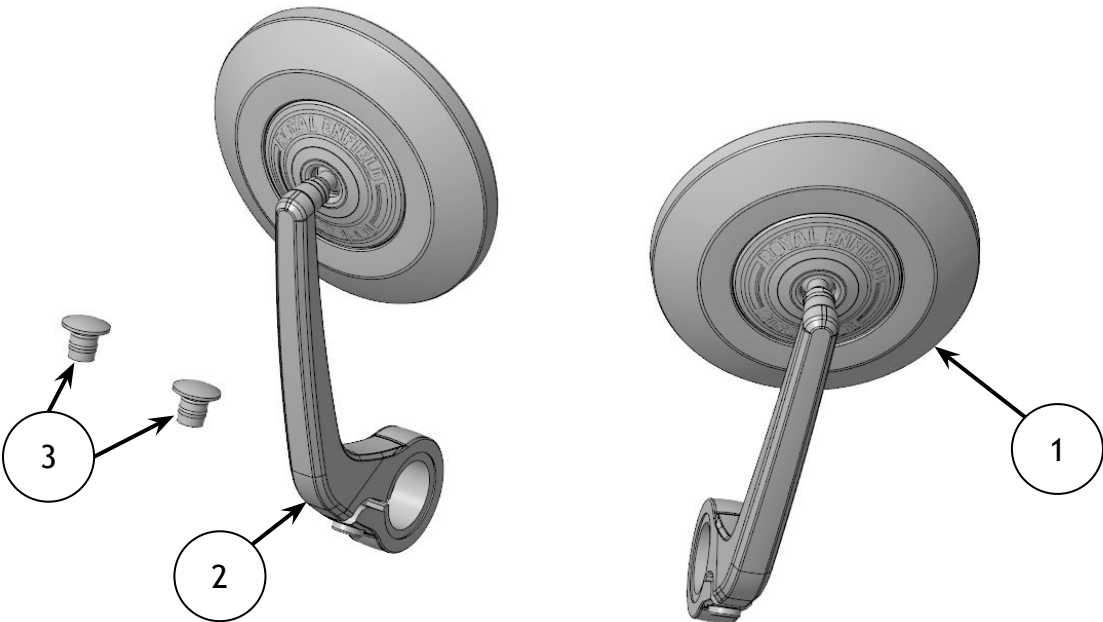

Item	Description	Qty
1	Bar end mirror, left hand	1
2	Bar end mirror, right hand	1
3	Mirror thread guard	2


Parts supplied: KXA00125

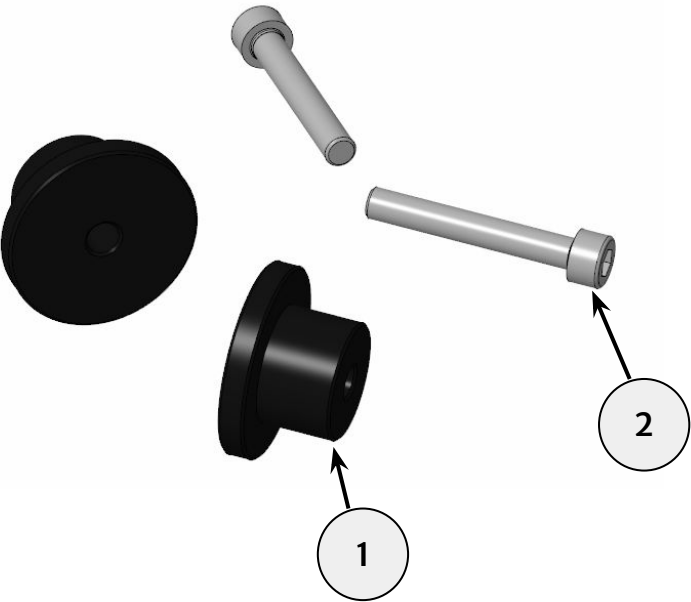

Item	Description	Qty
1	Bar end mirror mounting spacer	2
2	Fixing, M6 X 40 mm	2


1 Remove existing OE mirror (1) from the vehicle. Retain it for reuse, for if the bar end mirror mounting (KXL00156) is removed.

	14 mm socket and ratchet.
--	---------------------------

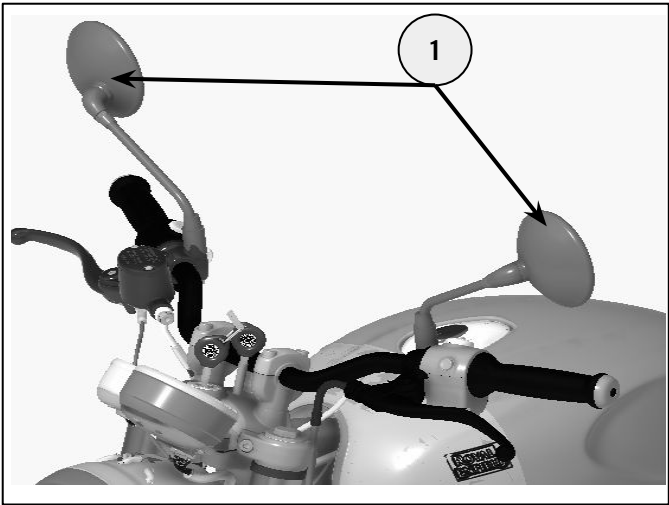


2 Slightly loosen the fixing (1) in the bar end mirror, right hand.

	5 mm hexagonal bit and ratchet.
--	---------------------------------

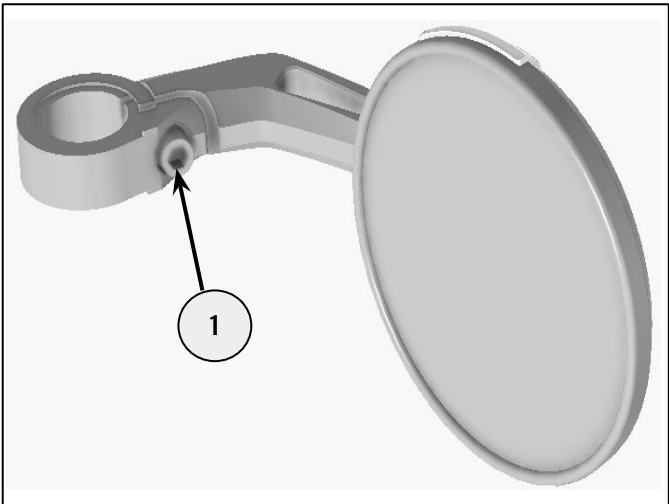


3 Push the bar end mount spacer (1) into the bar end mirror as shown with flange head positioned away from the logo.


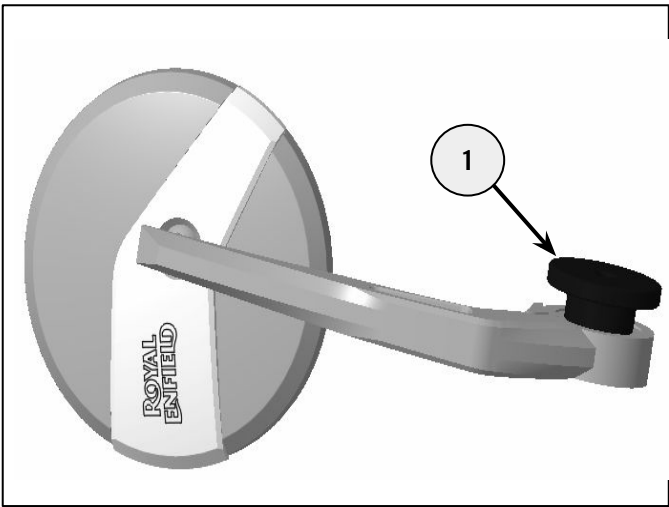


4 Tighten fixing (1) to 8 Nm.

	5 mm hexagonal bit with torque wrench.
--	--


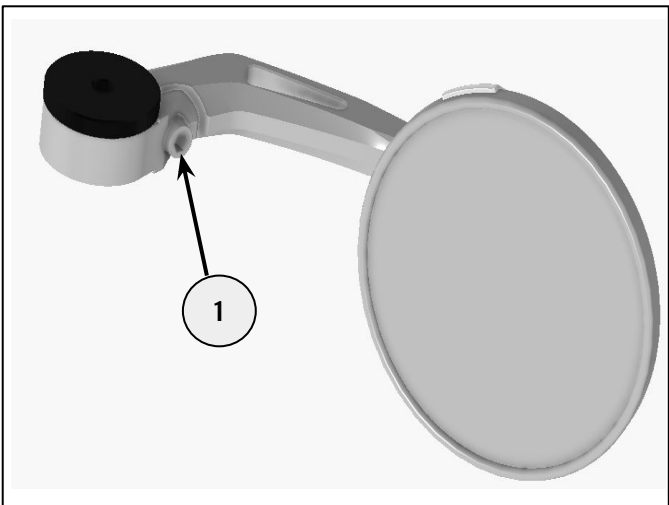


5 Remove the bar end weight (1) and fixing (2). Discard the fixing and retain the bar end weight for reuse.

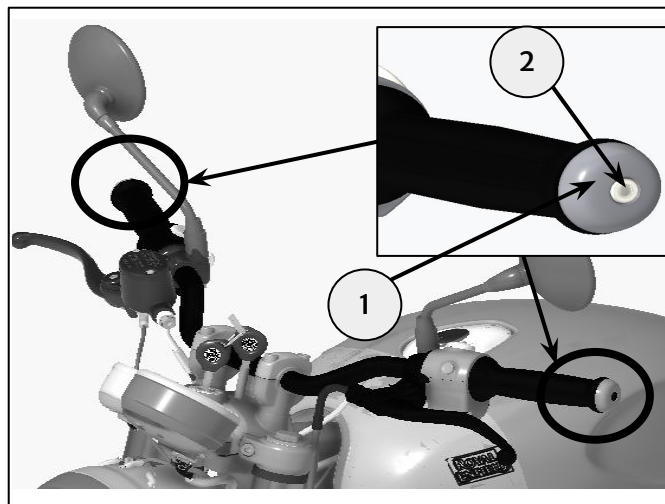


6 Place the bar end mirror, right hand (1) to the right end of the handlebar with the large spacer surface (2) in contact with the handlebar. Mount the bar end weight (3) as shown using M6 X 40 mm fixing (4). Tighten the fixing to **10 Nm**.

Remove protective film from mirror, adjust and set the mirror angle to comfortable viewing position.

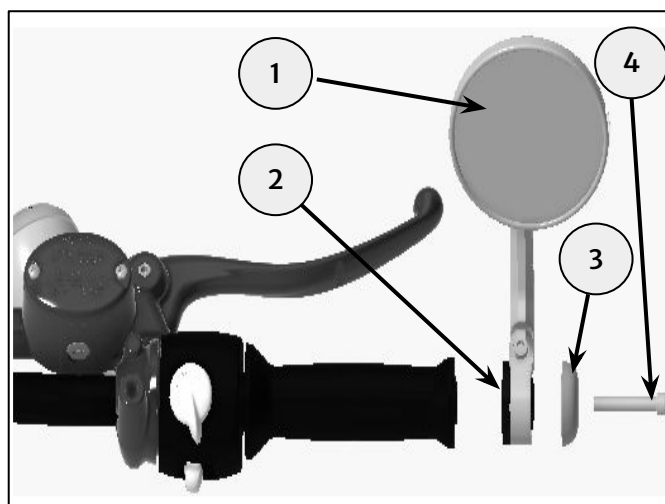

7 Repeat steps 2-6 on the other side using the bar end mirror, left hand.

 **NOTE:** Do not fit both bar end mirrors and regular mirrors simultaneously.

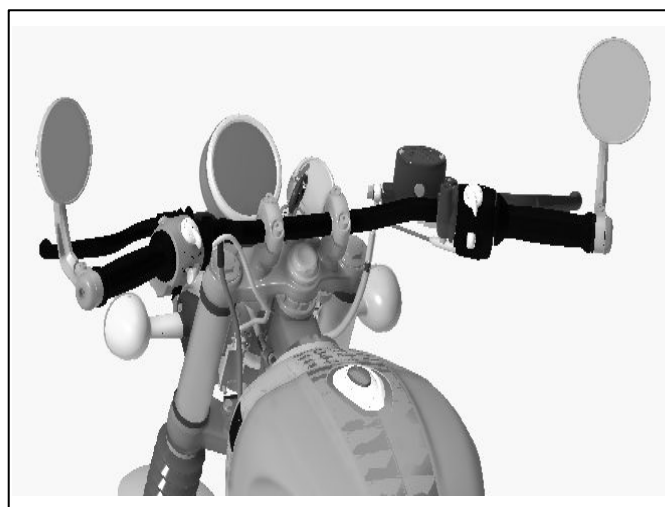

 **WARNING:** These mirrors must be mounted in the upright position (above the handlebars) to comply with statutory homologation requirements and ensure vehicle road-legality. Failure to fit the mirrors in this position may contravene the laws of your country, state, or territory. This will render the motorcycle illegal for road use where such laws apply. Always fit mirrors as shown.

 **WARNING:** After fitting any genuine Royal Enfield accessory, always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.