






Part Number:
KXA00241, KXA00293

Models:
SHOTGUN 650

-  **WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
-  **WARNING:** Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
-  **WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident
-  **CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

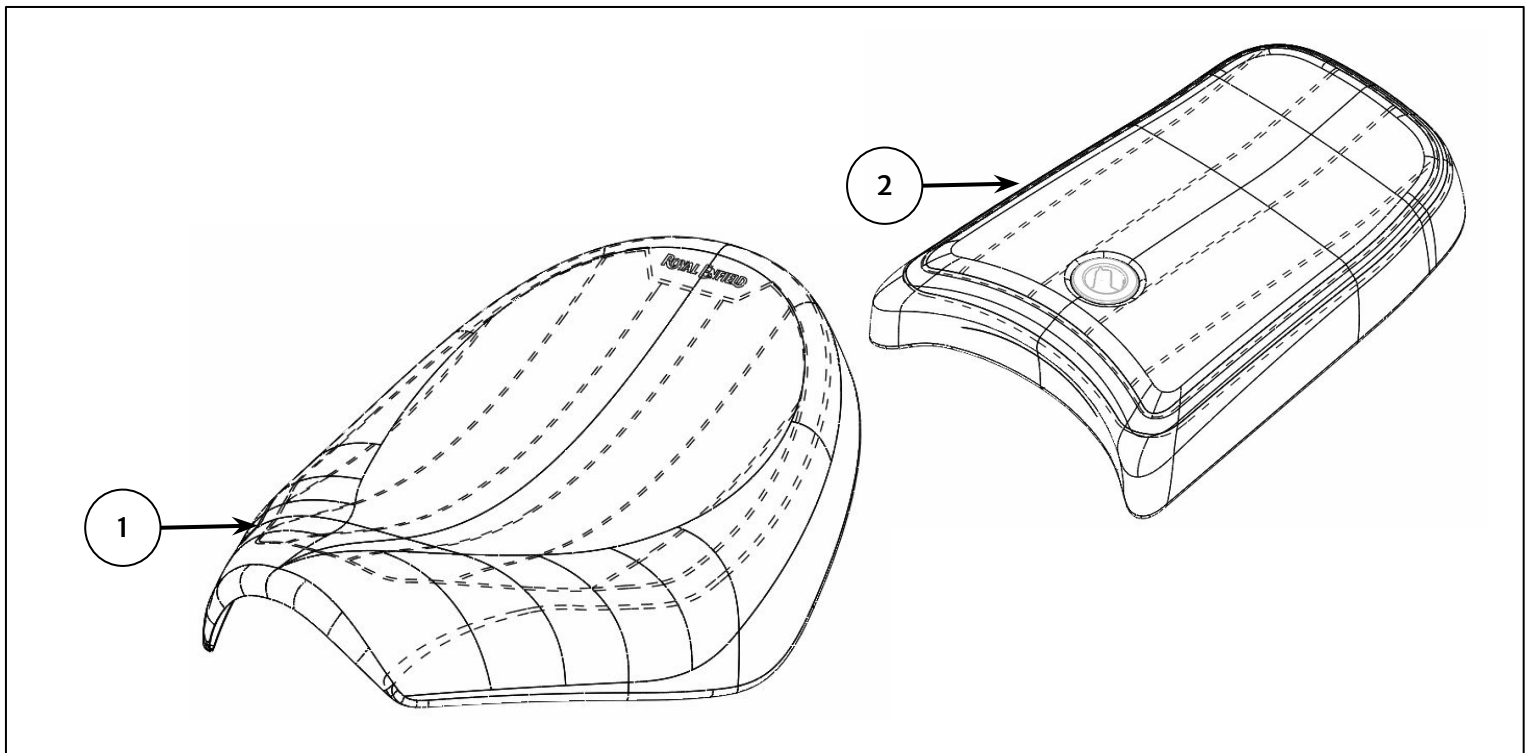


Item	Description	Qty
1	Signature rider seat	1
2	Signature pillion seat	1

1 Remove the rider seat as described in the owner's manual.




2 Remove the seat pan (1) from the seat (2) by removing the fixings (3).

Retain the seat pan and fixings for reuse. Retain the seat for reuse if the motorcycle is to be returned to its original condition.

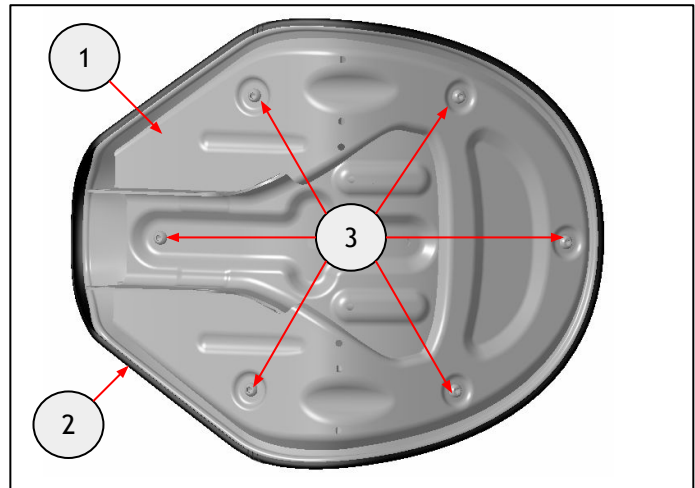


3 Fit the seat pan (1) removed in step 2 onto the Signature rider seat (2) using the fixings (3) removed in step 2. Tighten the fixings (3) to **7Nm**.

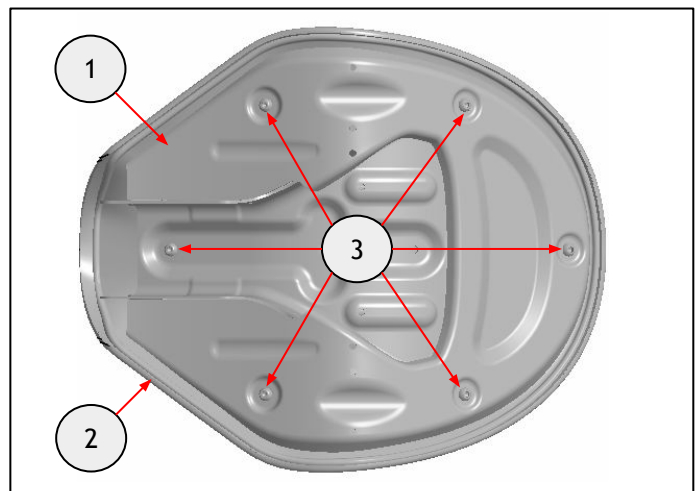


4mm hexagonal bit and torque wrench


4 Fit the Signature seat assembly on the vehicle as described in the owner's manual. Tighten the fixings (1) to **45Nm**.

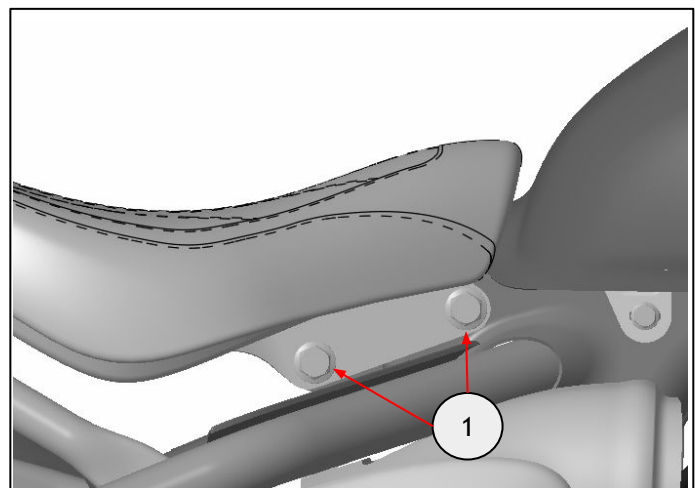

5 Remove the pillion seat as described in the owner's manual.

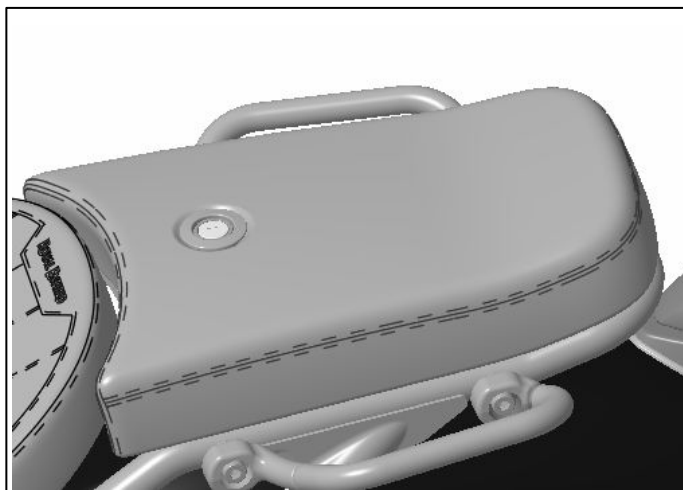


6 Remove the lock (1) from the seat (2) by removing the fixings (3). Retain the lock and fixings for reuse. Retain the factory seat for reuse if the motorcycle is to be returned to its original condition.

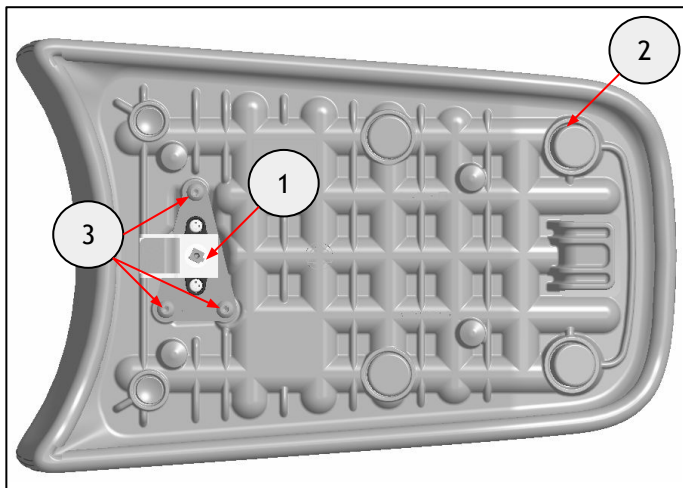


3mm hexagonal bit and ratchet

7 Fit the lock (1) removed in step 6 on the Signature seat (2) using the fixings (3) removed in step 6. Tighten the fixings to **3Nm**.

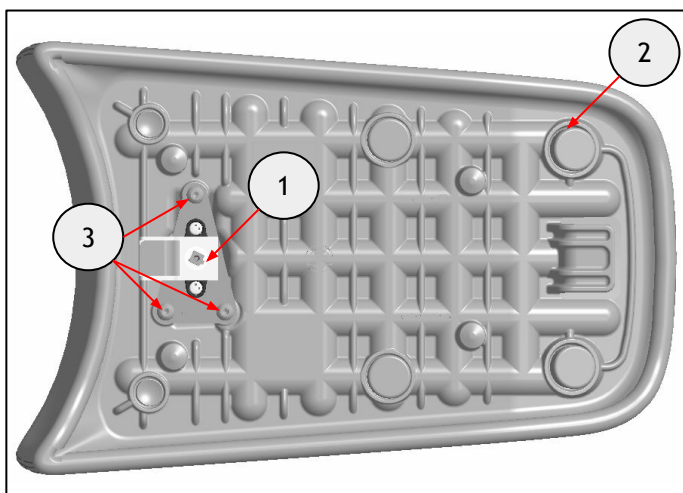

3mm hexagonal bit and torque wrench

8 Fit the Signature pillion seat on the vehicle as described in the owner's manual.

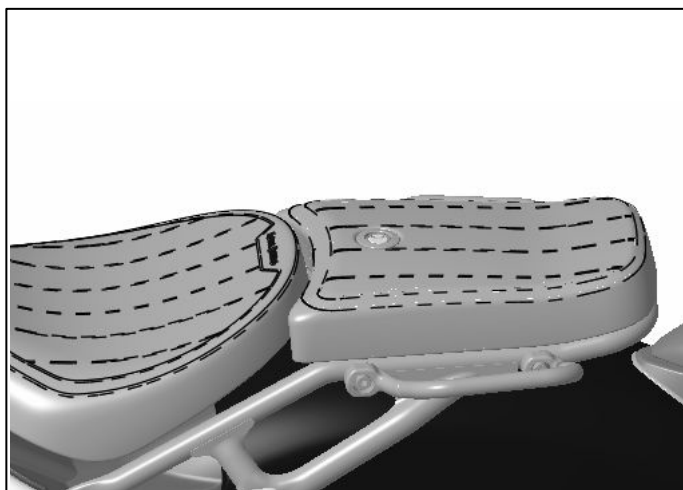



WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.