

Part Number:


KXA00494

Models:

Guerilla 450

- WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
- WARNING:** Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
- WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident
- CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.
- NOTE:** The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts Supplied: KXA00494

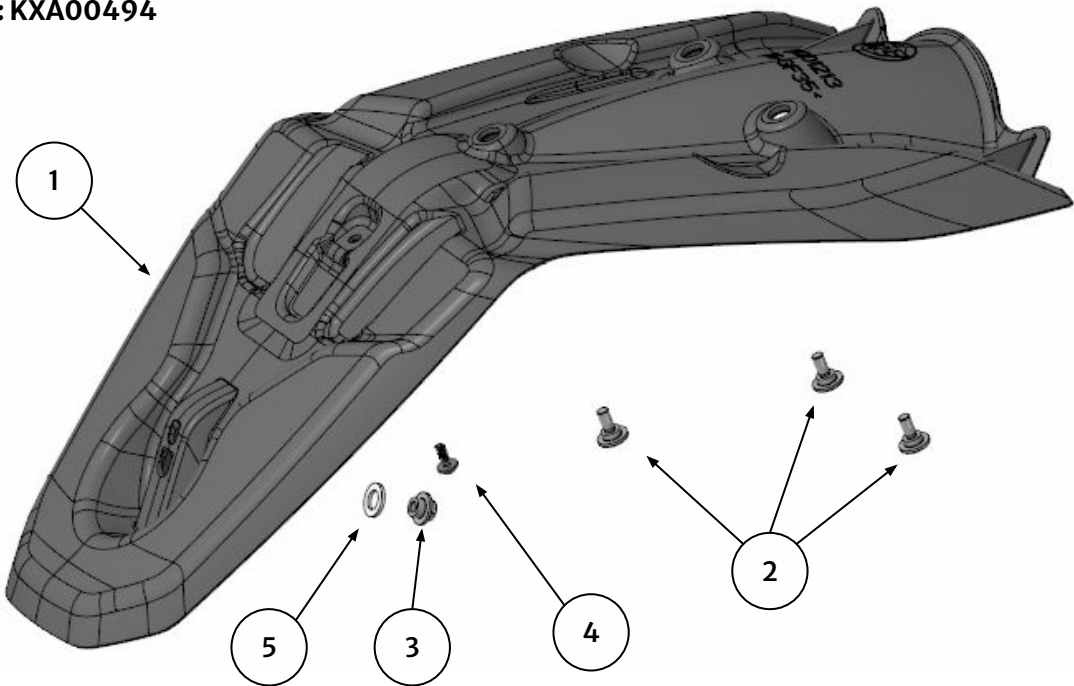


Item	Description	Qty
1	Rear Mudguard Extender	1
2	Fixing, M5 x 12.5mm	3
3	Nut, M5	1
4	Fixing, Torx 40x10mm	1
5	Washer, M8x14mm	1

1 If a number plate needs to be fitted up to the motorcycle, conduct this prior to fitting the mudguard extension kit.


2 Remove the nut (1) from the rear number plate hanger. Remove the reflector (2) and retain for reuse. Retain the nut for reuse if the motorcycle is to be returned to its original condition.



8mm hexagonal socket and ratchet

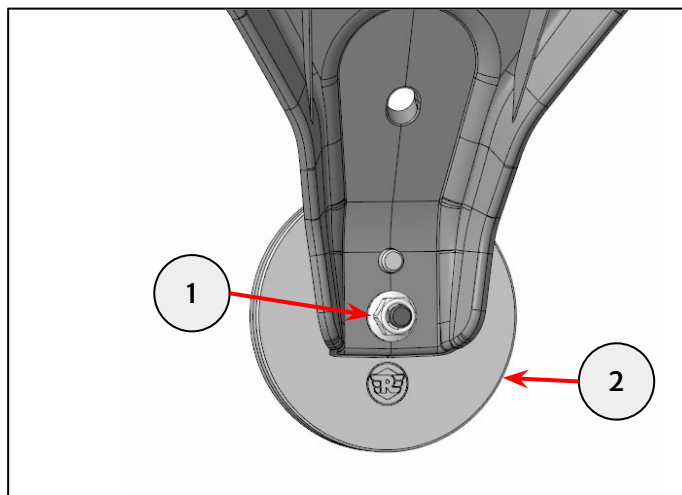

3 Locate the rear mudguard extender (1) into place, making sure that it has seated correctly into position against the mounting holes on the number plate hanger cover (2).

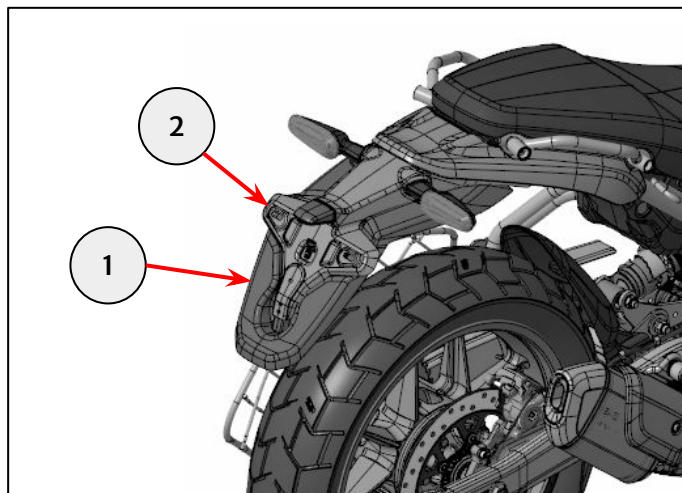


4 Secure the rear mudguard extender with three M5 x 12.5 fixings from the kit as shown (1).

Do not fully tighten the fixings at this stage.



4mm hexagonal bit and ratchet

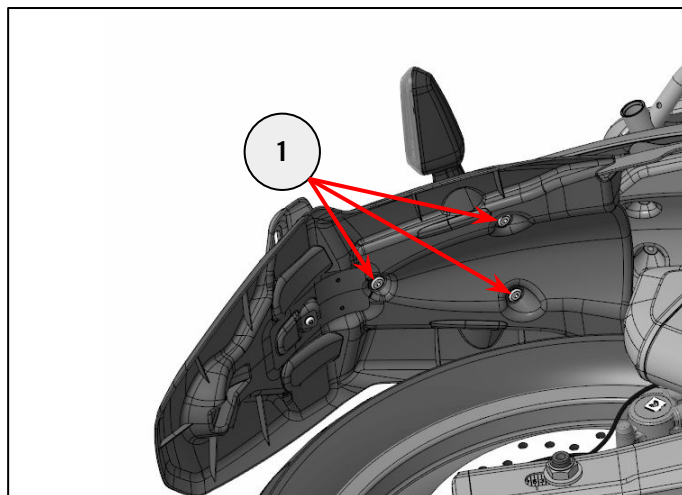


5 Refit the reflector (1) removed in step 2 using the washer (2) and nut (3) from the kit.

Do not fully tighten the fixing at this stage.



8mm hexagonal socket and ratchet

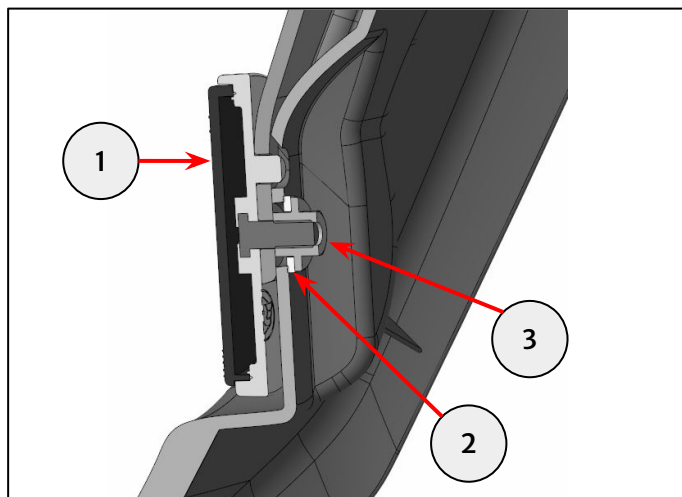


6 Assemble the torx fixing (1) from the kit into place through the central mounting hole on the rear mudguard extender.

Do not fully tighten the fixing at this stage.



T20 Torx bit and ratchet

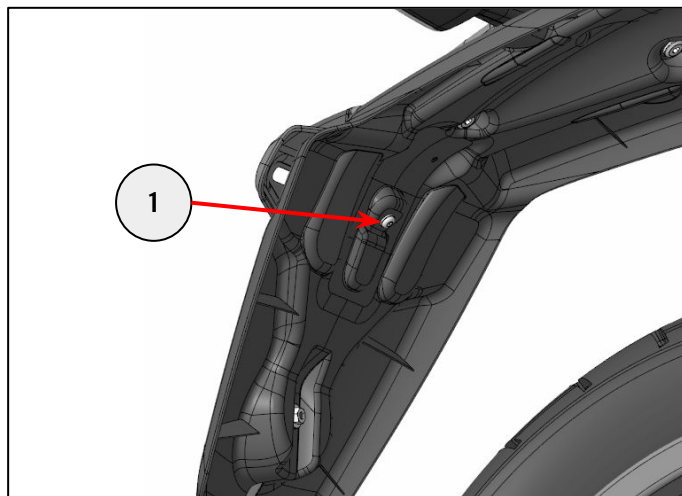

7 Ensure the rear mudguard extender is aligned correctly with the bike.

Tighten the three M5 x 12.5 fixings (1) to **5Nm**



4mm hexagonal bit and torque wrench

Tighten the M5 nut (2) to **5Nm**




8mm socket and torque wrench

Tighten the torx fixing (3) to **1.5Nm**



T20 Torx bit and torque wrench

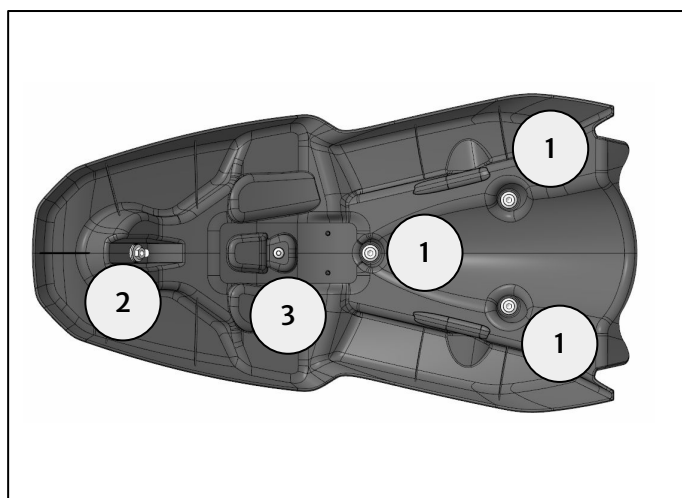

WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.