






Part Number:
1990269

Models:
Scram 440

- **WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
- **WARNING:** Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
- **WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident
- **CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.
- NOTE:** The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts Supplied: 1990269

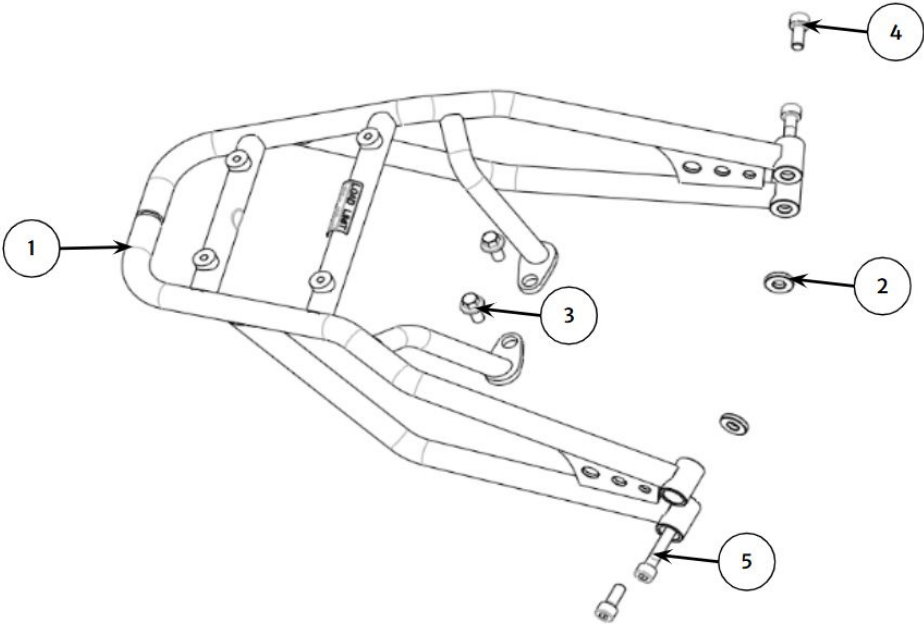



Item	Description	Qty
1	Top Box Rear Rack	1
2	Spacer	2
3	Fixing M8 x 16mm	2
4	Fixing M8 x 20mm	2
5	Fixing M8 x 40mm	2

1 Remove the seat as described in the Owner's Manual.




2 Remove the top (2) and side (3) mount fixings and remove the grab handle (1). Remove the rear saddle bag mounting fixing on each side (4).

Retain fixings and grab handle for reuse if the motorcycle is to be returned to its original condition.

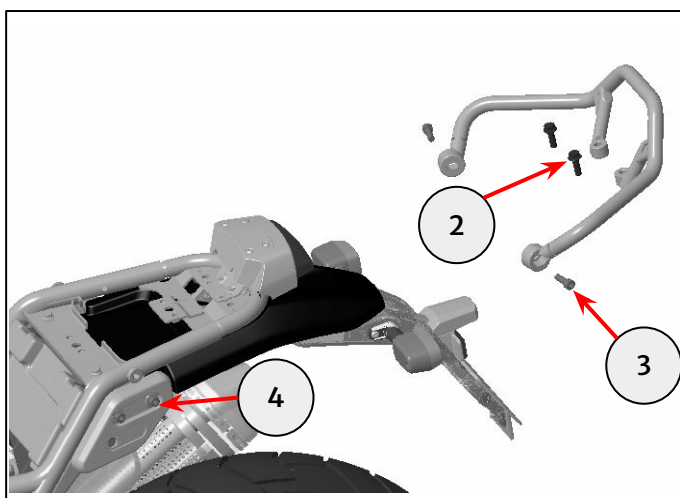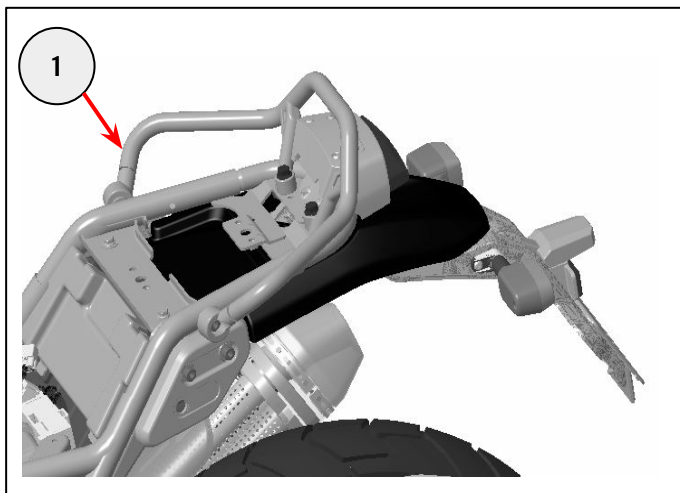

3 Place two spacers from the kit in the mounting location shown (1) and assemble the rack (2).


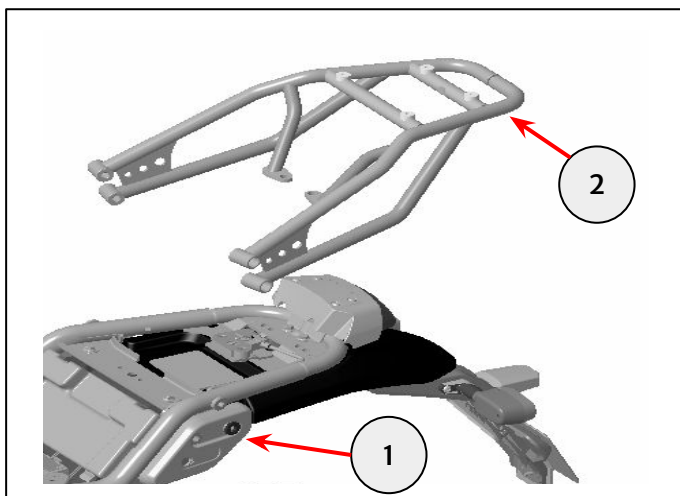


4 Assemble two M8 x 16mm fixings (1) through the central mounts, two M8 x 20 mm fixings (2) through the front upper mounts, and two M8 x 40 mm fixings (3) through the front lower mounts as shown.


Tighten the top mount fixings to **23Nm** and side mount fixings to **25Nm**.



6mm hexagonal bit,
11 mm socket and torque wrench.

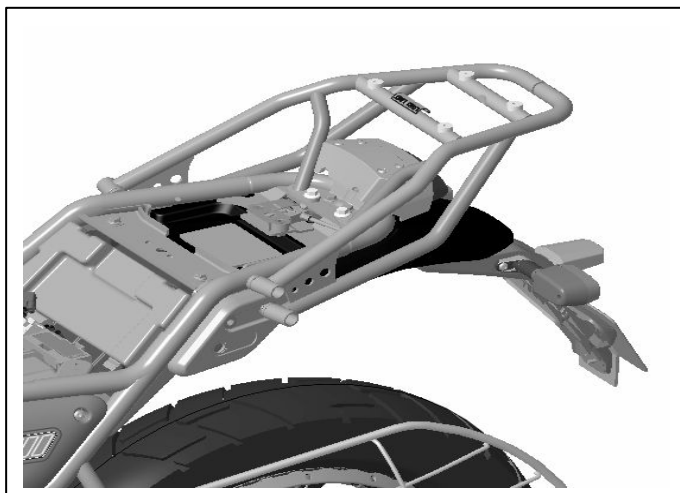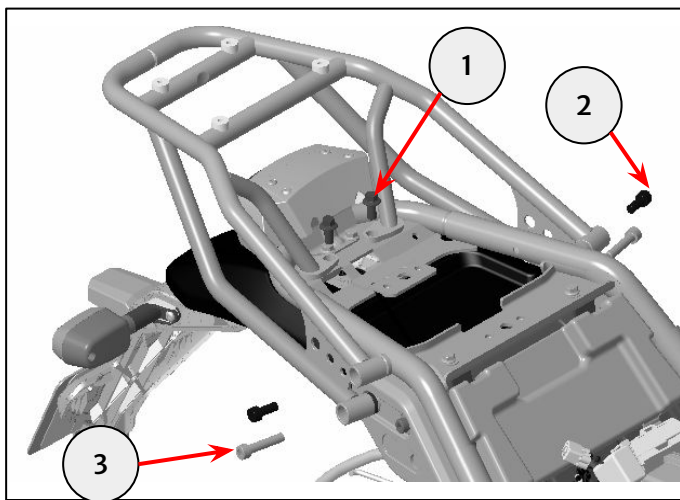

5 Refit the seat as described in the Owner's Manual.

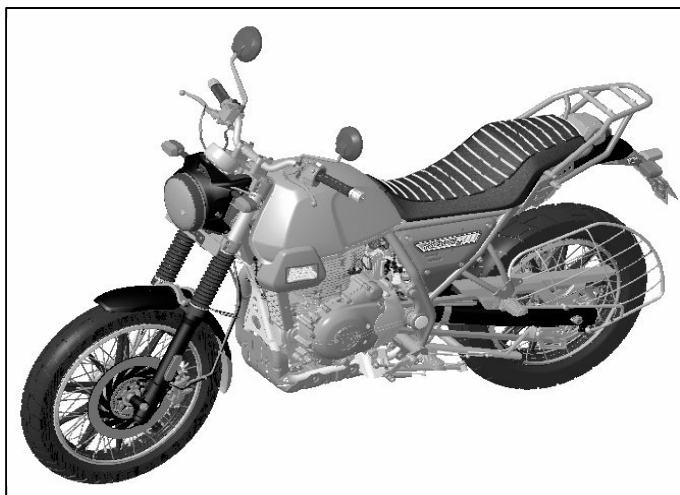

WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.