

Part Number:
KXA00655

Models:
Hunter 350 (Dual Channel models only)

WARNING: Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.

WARNING: Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.


WARNING: All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident

CAUTION: Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.


NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Identifying features for Dual Channel models:

1. LED Headlight
2. Alloy Wheels

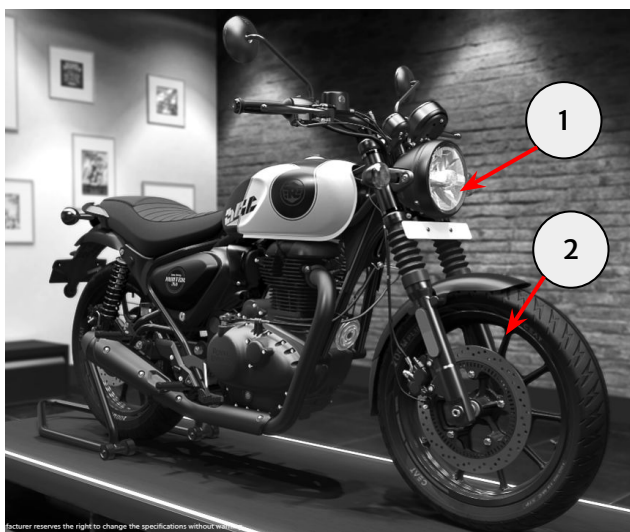


Parts Supplied: KXA00655

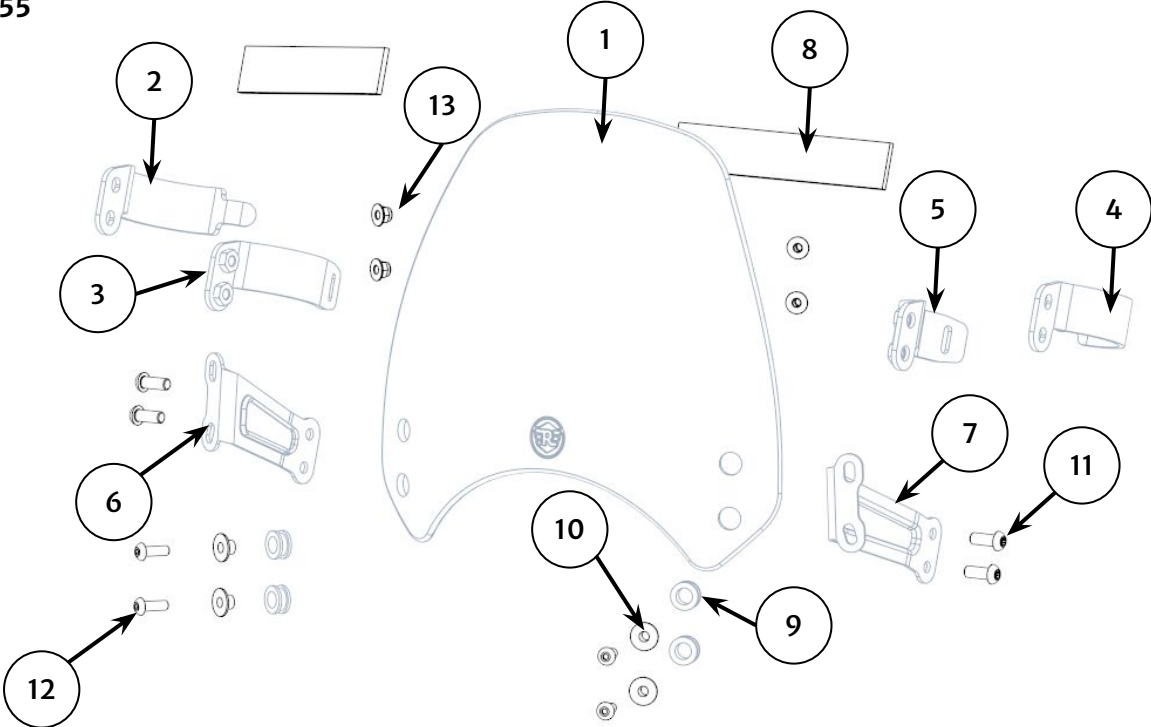

Item	Description	Qty
1	Tinted Flyscreen	1
2	Outer bracket, left hand	1
3	Inner bracket, left hand	1
4	Outer bracket, right hand	1
5	Inner bracket, right hand	1
6	Flyscreen bracket, left hand	1
7	Flyscreen bracket, right hand	1
8	Rubber sleeve	2
9	Grommet	4
10	Top hat	4
11	Fixing, M6 x 16mm	4
12	Fixing, M5 x 16mm	4
13	Nut	4

1 Fit the four rubber grommets (1) and four top hats (2) from the kit to the flyscreen (3), as shown.

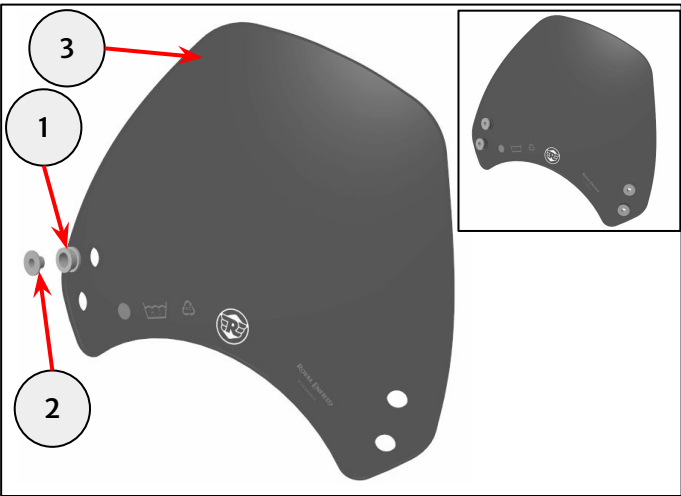


2 Assemble the left hand inner bracket (1) and left hand outer bracket (2) around the left hand fork tube with a rubber sleeve (3) placed in between the brackets and fork tube.


Place a left hand flyscreen bracket (4) in between the inner and outer brackets and secure with two M6 x 16mm fixings (5).

Ensure the outer and inner bracket top edge is aligned to the fork cover (6) as shown.

Do not fully tighten at this stage.

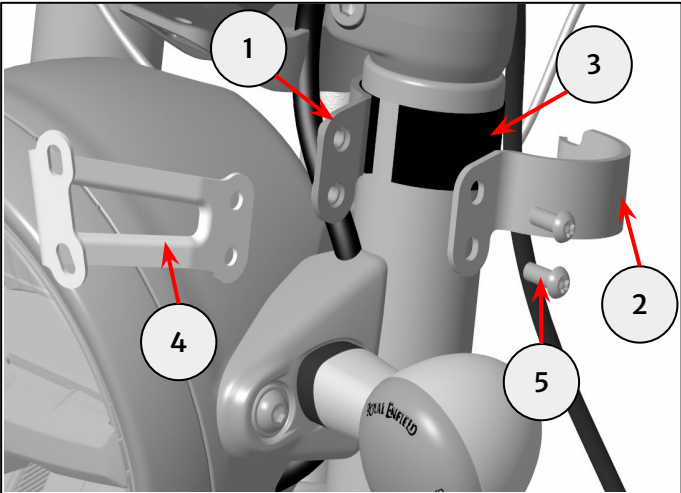


	T27 torx bit and ratchet
--	--------------------------

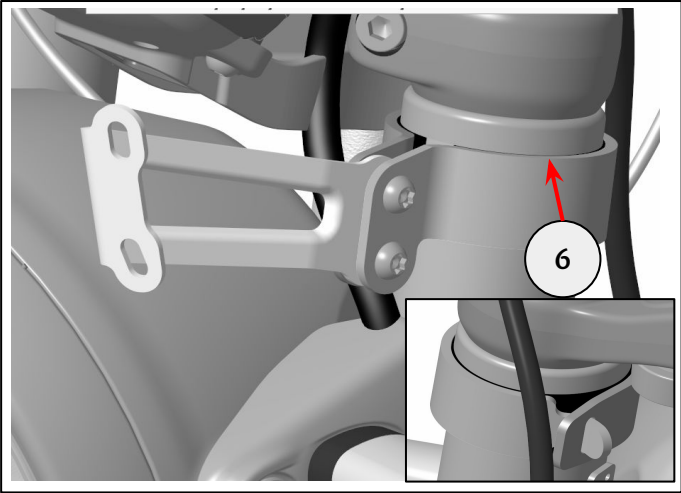

3. Repeat step 2 for the right hand side.

The flyscreen brackets should face forwards.

	T27 torx bit and ratchet
--	--------------------------


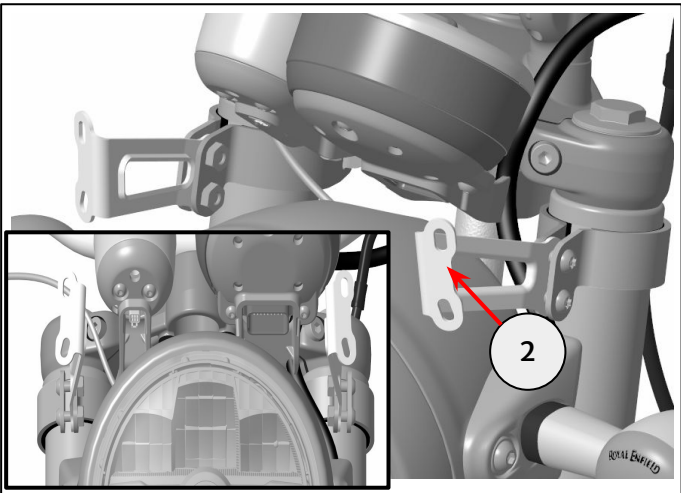


4 Assemble the flyscreen (1) to the left and right hand flyscreen brackets with four M5 x 16mm fixings (2) and four nuts (3) supplied in the kit and tighten to **3Nm**.

Note: Conduct a visual check to ensure minimum 10mm gap between flyscreen and headlamp bezel as shown.



3mm hexagonal bit and torque wrench
8mm spanner

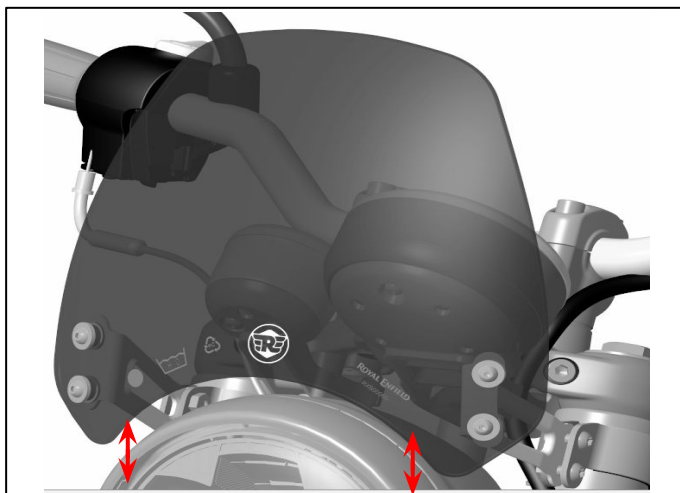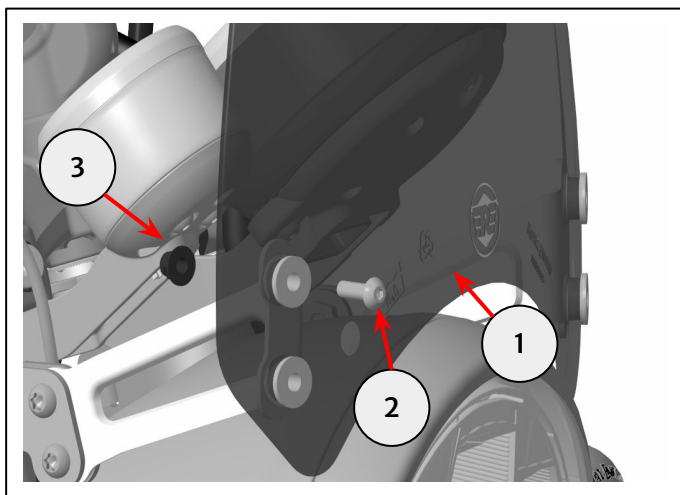

5 Tighten the fixings through the brackets assembled in steps 2 and 3 to **10Nm**.



T27 torx bit and torque wrench



WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.