

Part Number:

KXA00051, KXA00052, KXA00069,
KXA00070, KXA00071, KXA00072

Models:

BSVI Classic
With VIN starting ME3J3A5FAL3



WARNING: Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.



WARNING: Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.



WARNING: All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident.



CAUTION: Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

KXA00051, KXA00052



Item	Description	Instruction steps to follow
KXA00051	LOW SEAT, RIDER, BLACK	Steps 1-4
KXA00052	LOW SEAT, RIDER, BROWN	Steps 1-4

KXA00069, KXA00070



Item	Description	Instruction steps to follow
KXA00069	TOURING RIDER SEAT, BLACK	Steps 1-4
KXA00070	TOURING RIDER SEAT, BROWN	Steps 1-4

KXA00071, KXA00072




Item	Description	Instruction steps to follow
KXA00071	PASSENGER TOURING SEAT, BLACK	Steps 5-10
KXA00072	PASSENGER TOURING SEAT, BROWN	Steps 5-10


1 Remove 2x Hex Flange Head Bolts (1) and washers (2) from the underside of the rider seat. Retain fasteners for future use.




10mm hex socket with ratchet

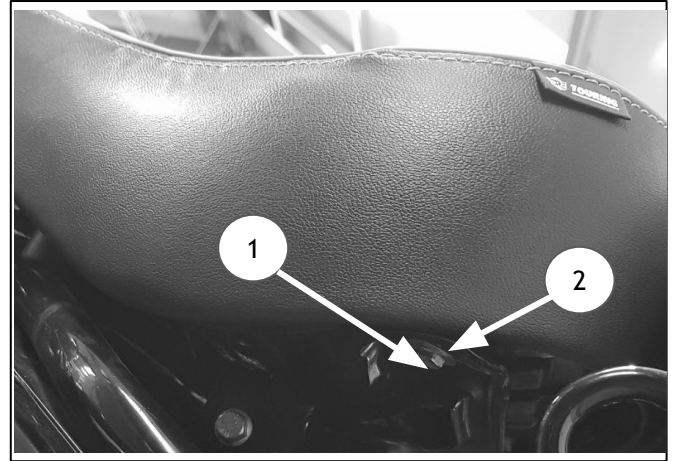

2 Lift the rider's seat from the rear and pull rearwards to unhook.

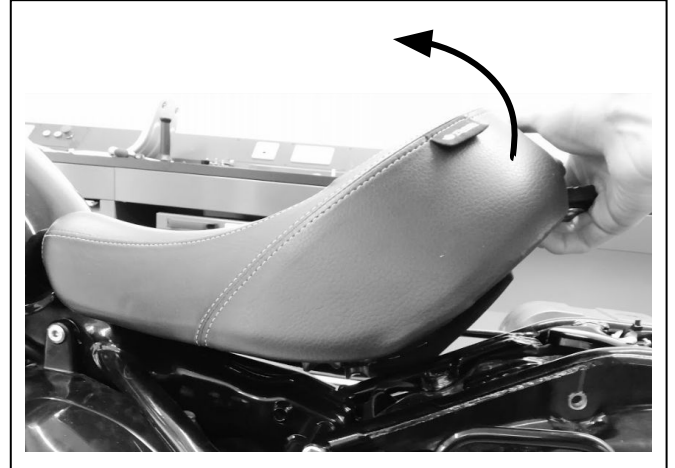


3 Push the front of the new accessory rider's seat on to the fuel tank tab and locate steel inserts into rubber mounts on the supporting bracket.

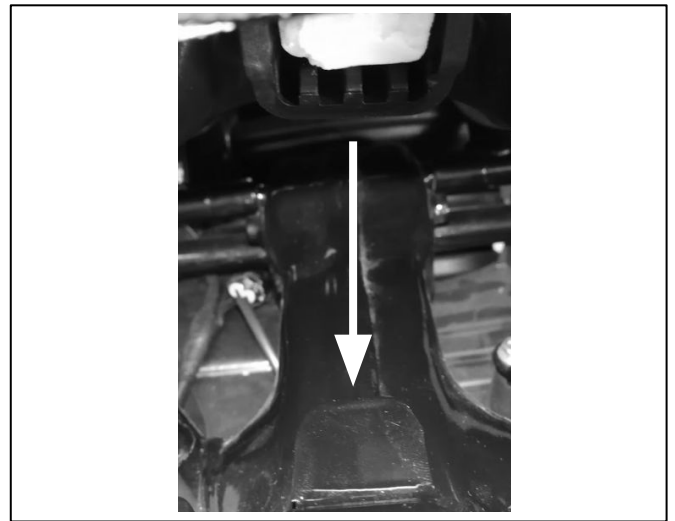

4 Insert the 2x Hex Flange Head Bolts (1) and washers (2) that were removed in step 1 into seat base threaded inserts. Torque to **10NM**.



10mm hex socket with torque wrench

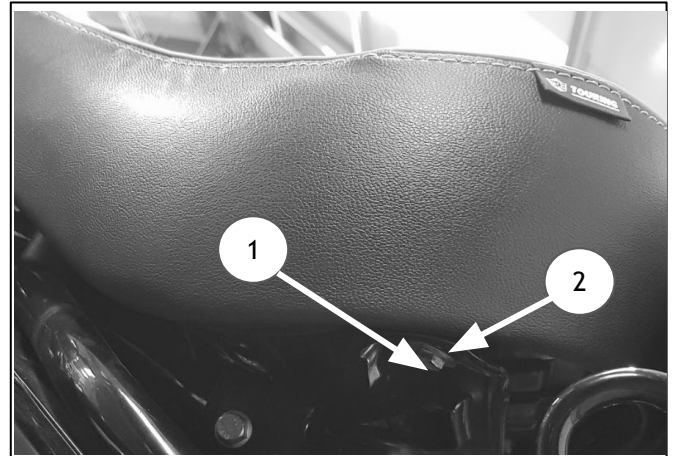


5 Remove 4x Cap Head Bolts (3) and grab rail (4). Retain fixings and grab rail for future use.




6mm hex bit with ratchet





6 Remove short (5) and long (6) inserts from the passenger seat and retain for future use. Repeat on other side.

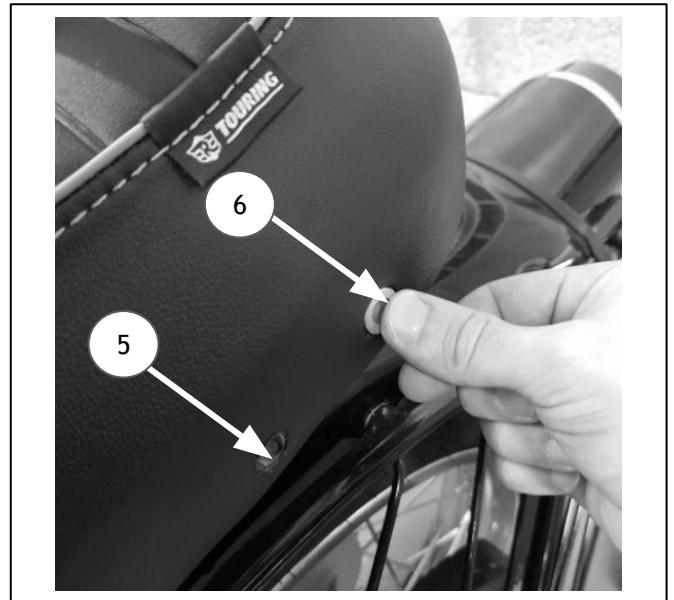


7 Remove passenger seat by lifting at the rear and pulling rearward.

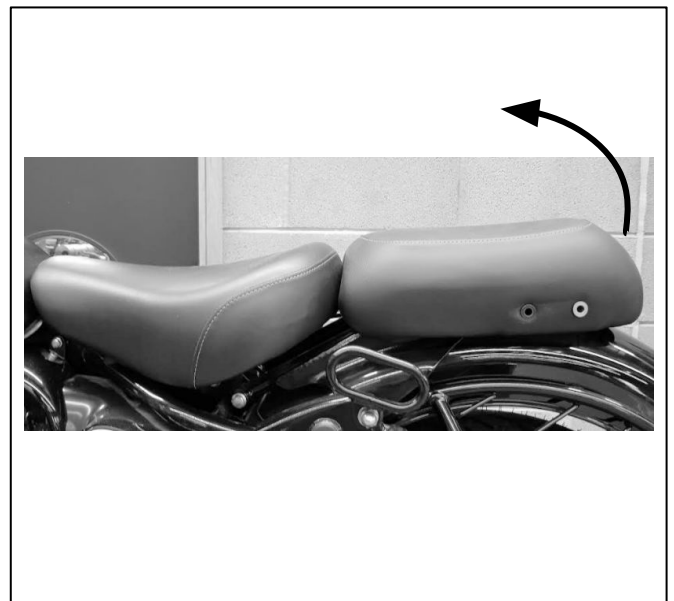


8 Re-fit short (5) and long (6) inserts into new accessory seat as shown. Inserts locate into grommets. Repeat on other side.

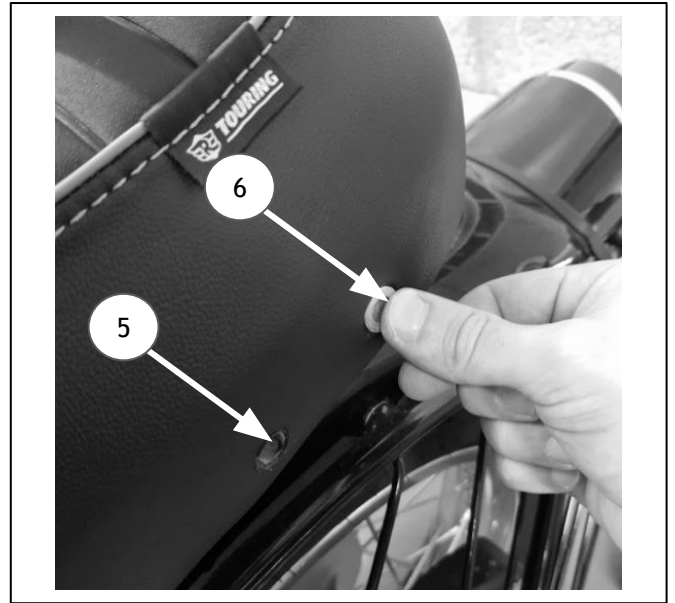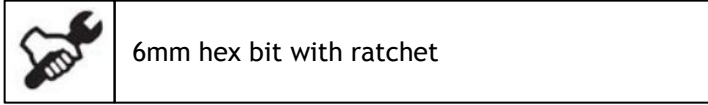

9 Fit new accessory passenger seat by locating front hooks into features as shown and then lowering down to align inserts (5 and 6) with threaded holes in subframe.

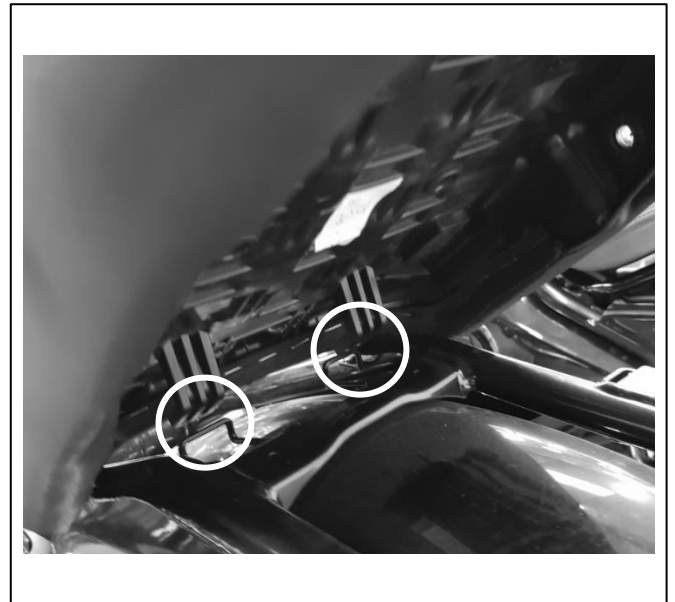

10 Re-fit grab rail (4) and secure seat assembly to subframe using 4x Cap Head Bolts (3) removed in step 5. Torque to 40NM.

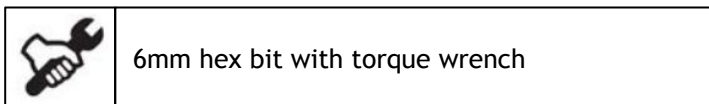

WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.