

Part Number:  
KXA00198

Models:  
Goan Classic 350, Classic 350, Bullet  
350 MY20 onwards, Meteor 350


- 

**WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.
- 

**WARNING:** Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.
- 


**WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident
- 

**CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.
- NOTE:** The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

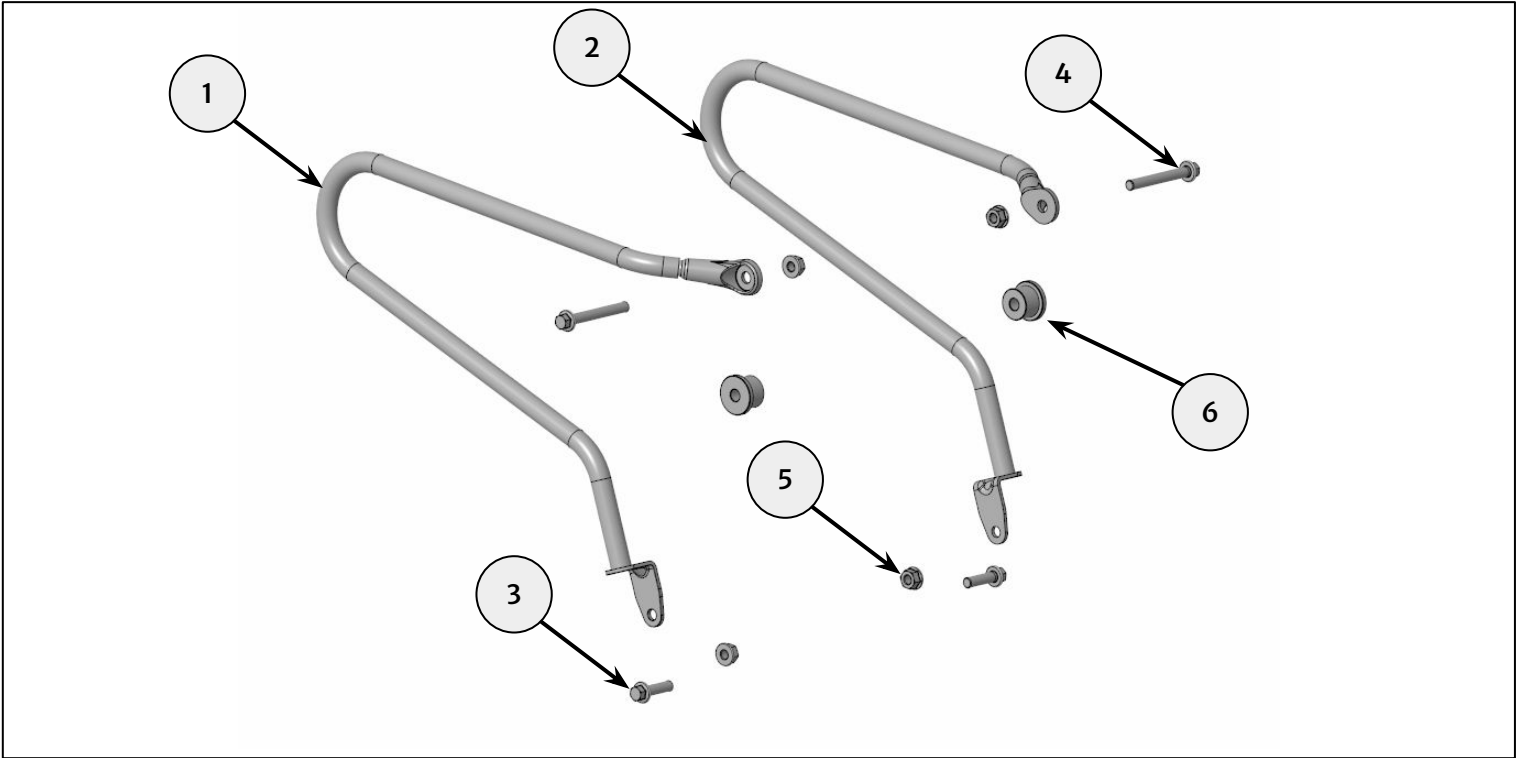


| Item | Description             | Qty |
|------|-------------------------|-----|
| 1    | Right Hand Pannier Rail | 1   |
| 2    | Left Hand Pannier Rail  | 1   |
| 3    | Fixing M8 x 30mm        | 2   |
| 4    | Fixing M8 x 65mm        | 2   |
| 5    | Nut, M8                 | 4   |
| 6    | Spacer Boss             | 2   |


**1** Carefully remove the rear mudguard cap (1) from the right hand side of the motorcycle. Retain the frame cap (1) if the motorcycle is to be returned to its original condition.

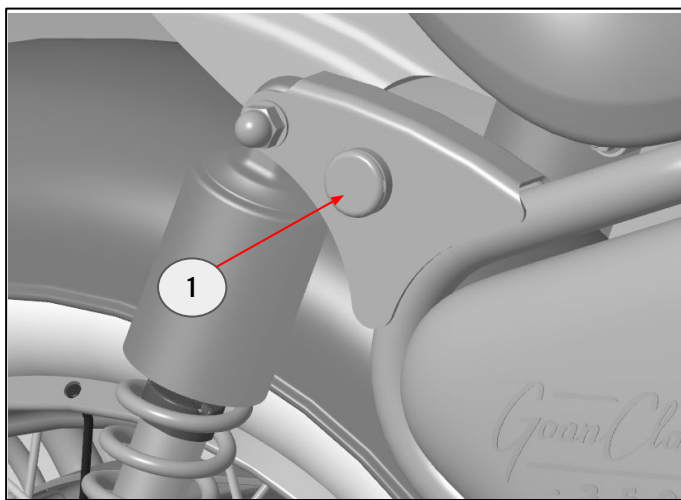

**2** Fit a spacer bosses (1) from the kit into the recess (2) in the motorcycle frame.

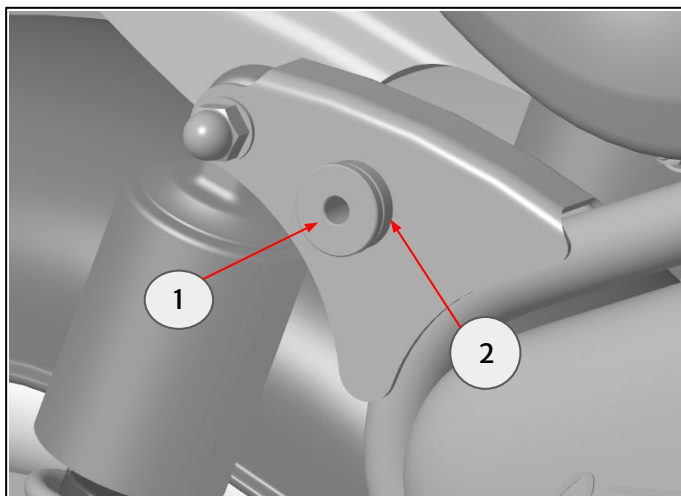


**3** Align the right hand pannier rail top mount (1) with the spacer boss (2) to the right hand side of the motorcycle. Fit the M8 x 65mm fixing (3) from the kit through the pannier rail top mount and motorcycle frame, as shown.

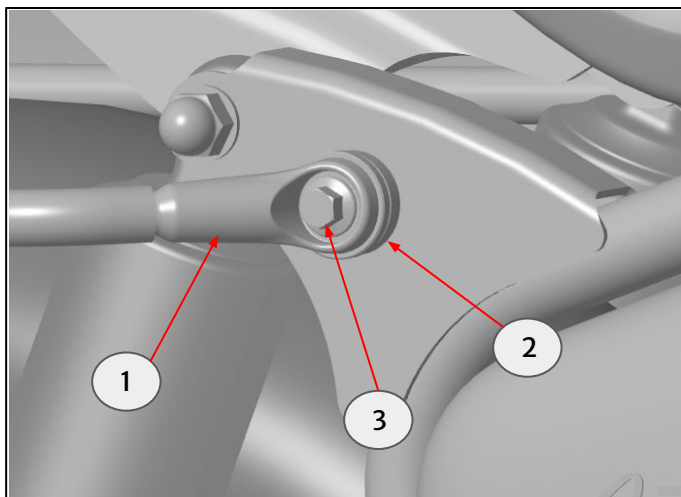

**4 For Goan Classic:**

Fit one of the M8 nuts (1) from the kit onto the fixing (2) at the inner side of the motorcycle frame, as shown. Do not fully tighten the fixing at this stage.

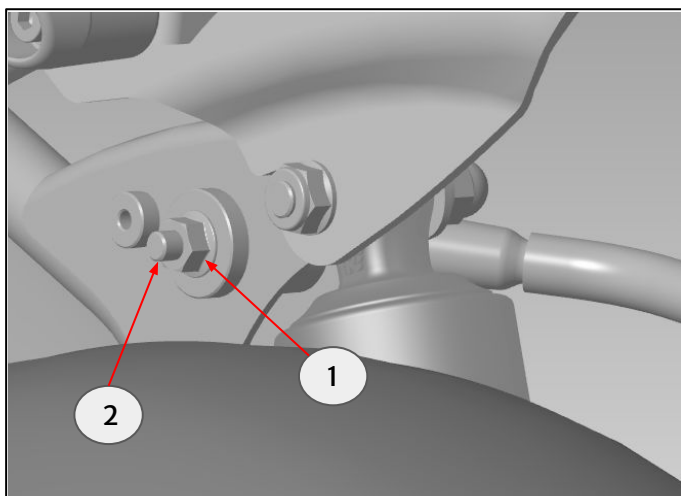

## 5 For Goan Classic:


Align the pannier lower mounting (1) with the bracket (2) on the motorcycle frame. Fit the M8 x 30mm fixing (3) and M8 nut (4) from the kit to secure the pannier rail lower mounting, as shown. Do not fully tighten the fixing at this stage.



10mm socket and ratchet



13mm spanner

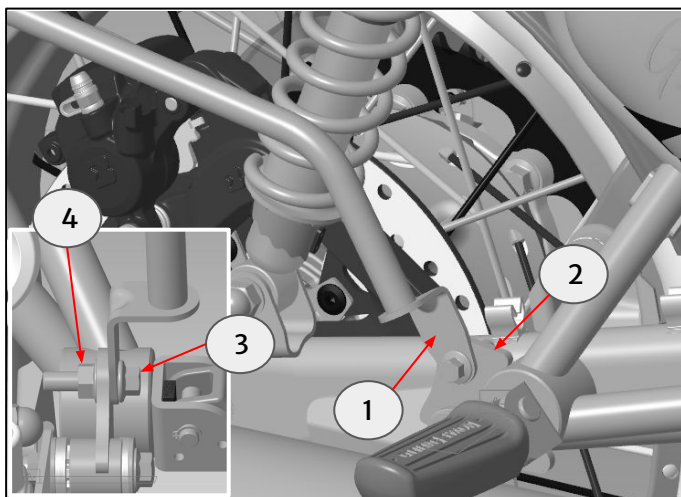

## 6 For Classic, Bullet & Meteor models:


Align the pannier lower mounting (1) with the bracket (2) on the motorcycle frame. Check the mudguard boss (3) is aligned.

Fit the M8 x 30mm fixing (4) from the kit to secure the pannier rail lower mounting, as shown.

Do not fully tighten the fixing at this stage.



10mm socket and torque wrench

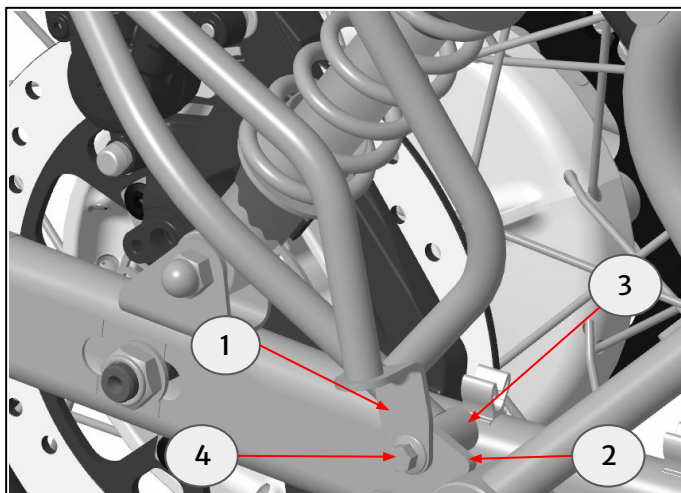

## 7 Tighten the upper (1) and lower (2) pannier rail fixings to 25Nm.




10mm socket and torque wrench


For Goan Classic:



13mm spanner

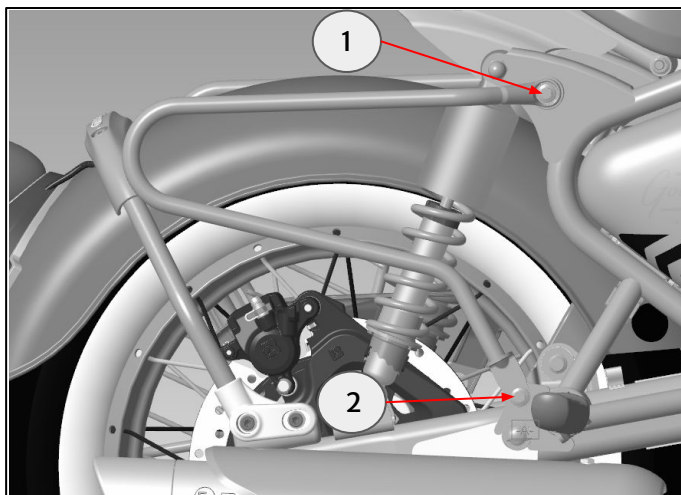

## 8 Repeat all steps for the left hand side of the motorcycle.

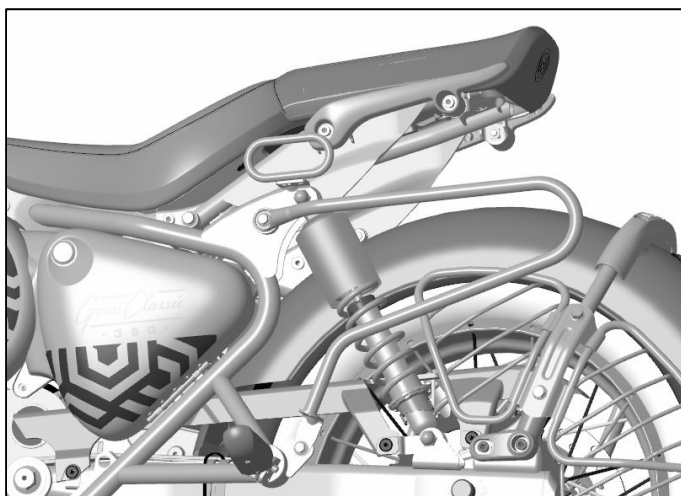



**WARNING:** After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.