

ROYAL ENFIELD

Genuine Motorcycle Accessory Instructions

SILVER SUMP GUARD /
BLACK SUMP GUARD

Part Number: - KXA00675 / KXA00676

Models: FF.C6

WARNING

Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorized Royal Enfield dealer.

WARNING

Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.

WARNING

All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident.

WARNING

Ensure the electric vehicle is completely powered off and the main power switch is disabled before starting the accessory kit installation.


CAUTION

Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE

- The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

Parts Supplied: KXA00675 / KXA00676

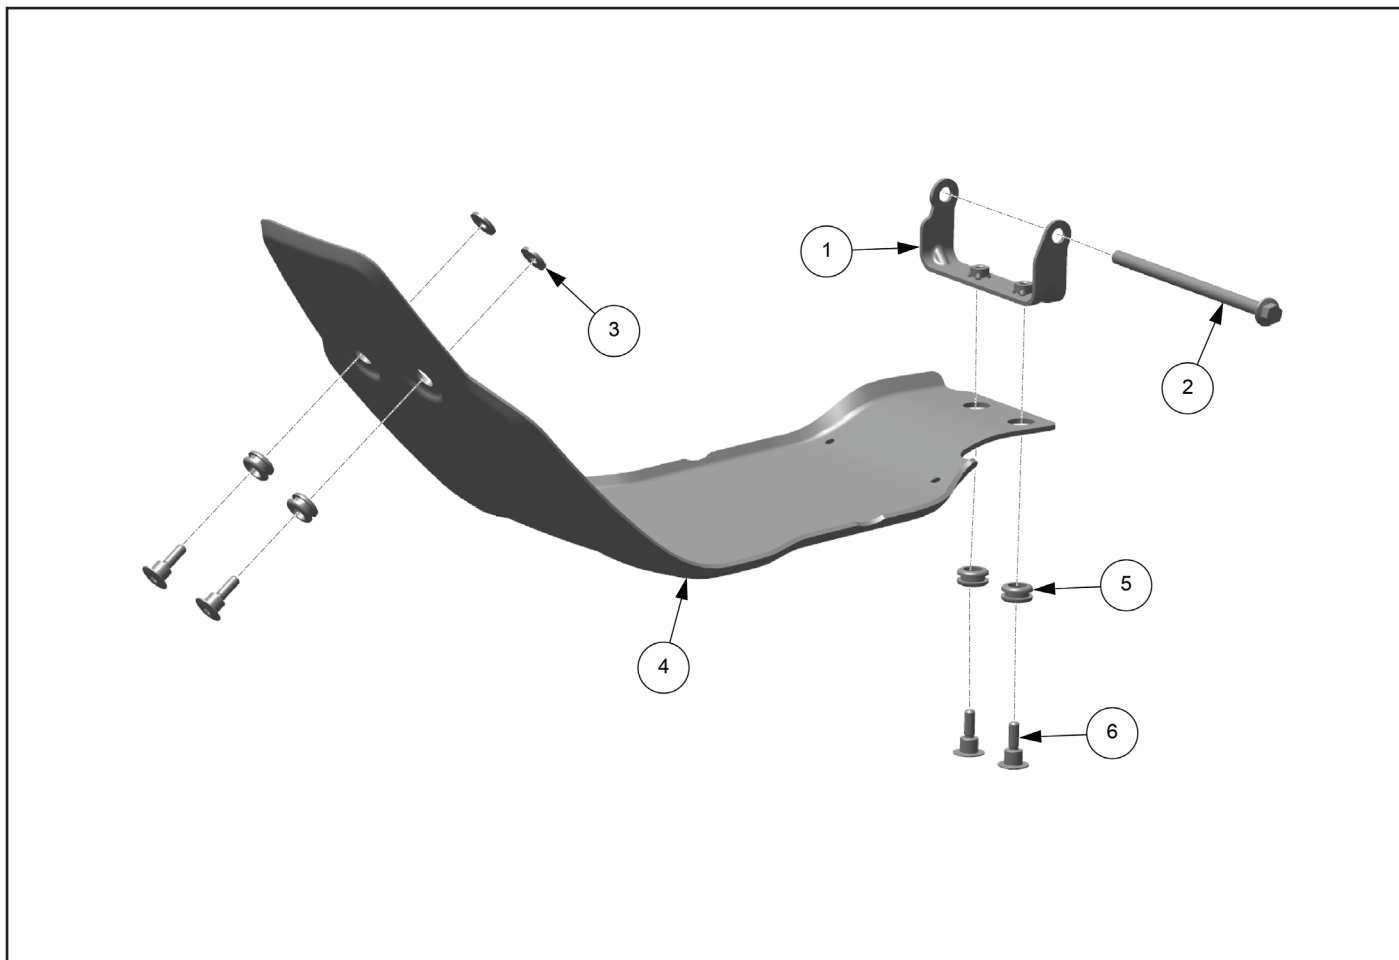


Item	Description	Qty
1	Rear bracket	1
2	Fixing, M8 x 145mm	1
3	Washer, M6	2
4	Sump guard	1
5	Rubber grommet	4
6	Fixing, M6 x 16mm	4

Installation Instructions

1. Remove rear spine nut **(2)** and bolt **(1)**.


Retain nut **(2)** for future use and retain bolt **(1)** if motorcycle is to be returned to its original condition.

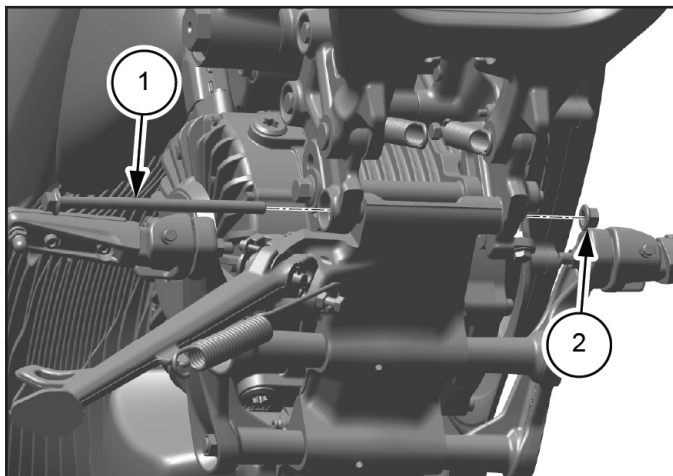

12 mm socket and ratchet


2. Fit the rear bracket **(1)** to the spine along with the M8 x 145mm fixing **(2)** from the kit and the nut **(3)**.

Do not fully tighten at this stage.

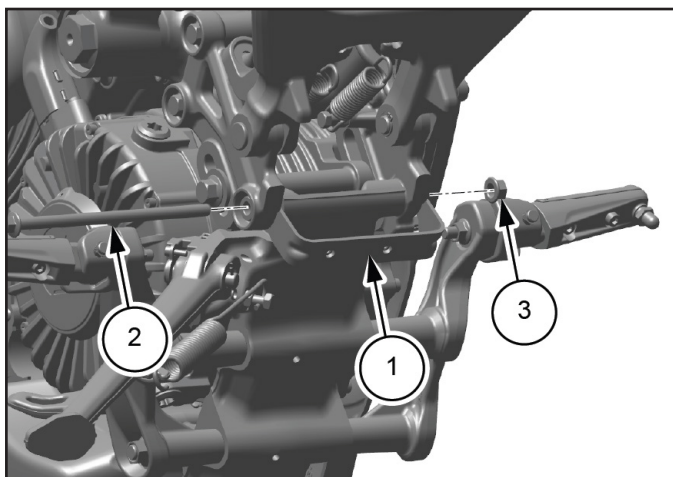


12 mm socket and ratchet

3. Assemble four grommets **(1)** to the sump guard **(2)**.

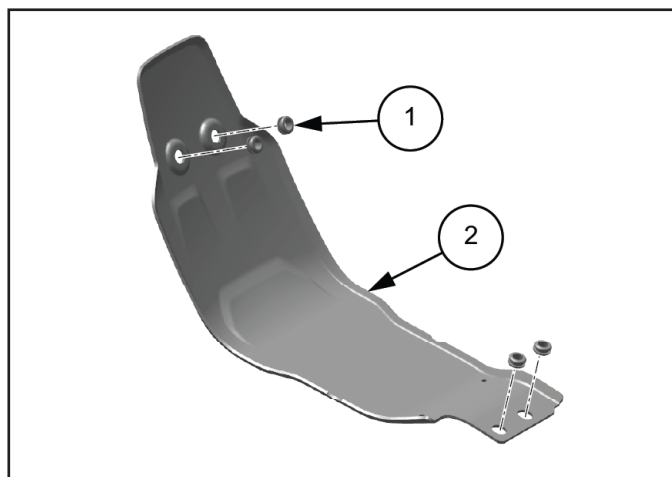

4. Fit sump guard **(1)** to the spine at the front and to the bracket at the rear using the four M6 x 16mm fixings **(2)** from kit, placing the two washers **(3)** in between the grommets and spine through the front mounts.

Do not fully tighten the fixing at this stage.

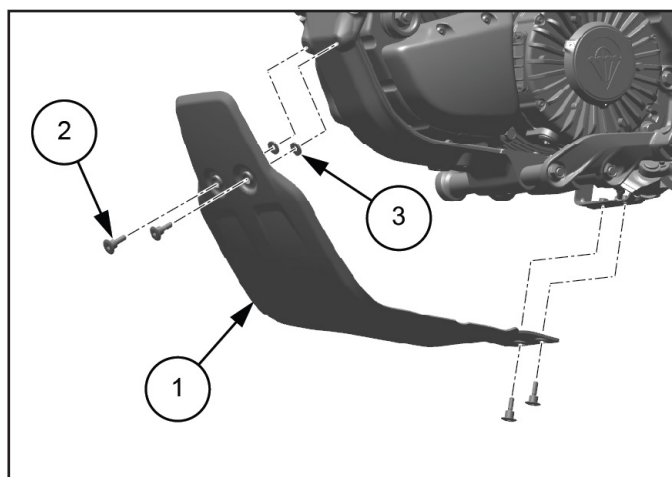

5 mm hexagonal bit and ratchet

5. Tighten rear bracket fixing (1) to **20 Nm**.




12 mm socket and torque wrench

Tighten front sump guard fixings (2) to **7 Nm** and the rear fixings (3) to **10 Nm**.



5 mm hexagonal bit and torque wrench

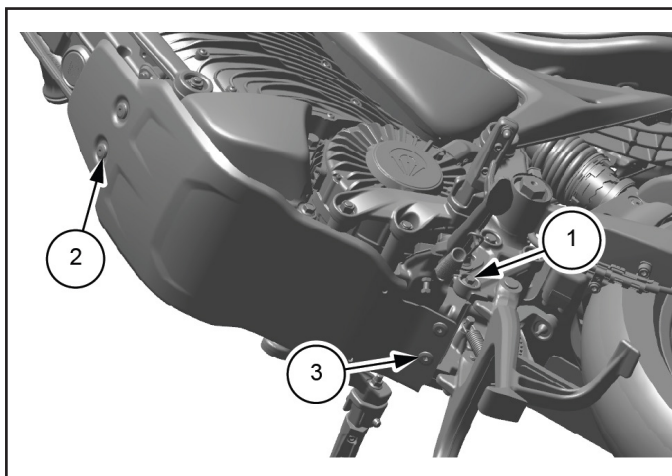

⚠ WARNING

After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.